



IP Phone User Guide

P23G/P23GW

Version 1.1.0
Sep. 2024

Copyright

Copyright © 2020 Flyingvoice Network Technology CO., LTD.

Copyright © 2020 Flyingvoice Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Flyingvoice Network Technology CO., LTD. Under the law, reproducing includes translating into another language or format.

When this publication is made available on media, Flyingvoice Network Technology CO., LTD. gives its consent to downloading and printing copies of the content provided in this file only for private use but not for redistribution. No parts of this publication may be subject to alteration, modification or commercial use. Flyingvoice Network Technology CO., LTD. will not be liable for any damages arising from use of an illegally modified or altered publication.

Trademark

Flyingvoice®, the logo and the name and marks are trademark of Flyingvoice Network Technology CO., LTD, which are registered legally in China, the United States, EU (European Union) and other countries.

All other trademarks belong to their respective owners. Without Flyingvoice's express written permission, the recipient shall not reproduce or transmit any portion thereof in any form or by any means, with any purpose other than personal use.

Warranty

1. Warranty

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS GUIDE ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS GUIDE ARE BELIEVED TO BE ACCURATE AND PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF PRODUCTS.

2. Disclaimer

FLYINGVOICE NETWORK TECHNOLOGY CO., LTD. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS GUIDE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A

PARTICULAR PURPOSE. FLYINGVOICE Network Technology CO., LTD. shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this guide.

3. Limitation of Liability

Flyingvoice and/or its respective suppliers are not responsible for the suitability of the information contained in this document for any reason. The information is provided "as is",

and Flyingvoice does not provide any warranty and is subject to change without notice. All risks other than risks caused by use of the information are borne by the recipient. In no event, even if Flyingvoice has been suggested the occurrence of damages that are direct, consequential, incidental, special, punitive or whatsoever (Including but not limited to loss of business profit, business interruption or loss of business information), shall not be liable for these damages.

End User License Agreement

This End User License Agreement ("EULA") is a legal agreement between you and Flyingvoice. By installing, copying or otherwise using the Products, you: (1) agree to be bounded by the terms of this EULA, (2) you are the owner or an authorized user of the device, and (3) you represent and warrant that you have the right, authority and capacity to enter into this agreement and to abide by all its terms and conditions, just as if you had signed it. The EULA for this product is available on the Flyingvoice Support page for the product.

Patent Information

China, the United States, EU (European Union) and other countries are protecting one or more patents of accompanying products and/or patents being applied by Flyingvoice.

Technical Support

Visit www.flyingvoice.com for product documents and FAQ, or contact Flyingvoice by email at support@flyingvoice.com. We'll get you the help you need.

Declaration of Conformity

Part 15 FCC Rules

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following three conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CE

Manufacturer: Flyingvoice Network Technology Co., Ltd.

Address: 1801-1802, Building 1, Chongwen Park, Nanshan Zhiyuan, Nanshan District, Shenzhen, China

Hereby, Flyingvoice Network Technology Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

A copy of the declaration of conformity can be obtained with this user manual; this product is not restricted in the EU.

The wireless operation frequency

WiFi: 2412MHz-2472MHz, Max EIRP Power 18.16 dBm

Safety warning and Attentions

If use adapter, adapter must be comply 2014/30/EU Directive.

Adapter Caution: Adapter shall be installed near the equipment and shall be easily accessible.

Do not store or use your product in temperatures higher than 50°C.

RF Exposure Statement

The distance between user and products should be no less than 20cm.

GNU GPL INFORMATION

Flyingvoice phone firmware contains third-party software under the GNU General Public License (GPL). Flyingvoice uses software under the specific terms of the GPL. Please refer to the GPL for the exact terms and conditions of the license.

The original GPL license, source code of components licensed under GPL and used in Flyingvoice products can be downloaded online:

https://www.flyingvoice.com/soft_GPL.aspx

Risk Warning Statement

This risk warning statement contains a summary of external network servers that FVUI will access under its factory settings in order to obtain necessary service support. If you want to prohibit these accesses based on security considerations, you can disable them through the WEB management page.

Number	Server Domain Name	Description	Factory Setting
1	https://prv3.flyingvoice.net:442	Flyingvoice Provision web management configuration server	Enable
2	https://prv4.flyingvoice.net	Flyingvoice Provision web management backup server	Enable
3	pool.ntp.org/cn.pool.ntp.org	NTP server	Enable
4	https://rps.flyingvoice.net	Flyingvoice Provision redirect server	Enable

Table of Contents

About This Guide.....	6
Chapter 1 Introduction.....	7
1.1 Hardware Overview.....	7
P23G/P23GW Hardware.....	7
1.2 LED Indicator.....	9
Power LED Indicator.....	9
Line Key LED.....	9
1.3 Screen and Icons.....	10
Idle Screen.....	10
Calls Screen.....	10
Icons in the Status Bar.....	11
Line Key Icons.....	12
Other Icons.....	12
1.4 Entering Characters.....	13
Chapter 2 Getting Started.....	14
2.1 Phone initialization.....	14
2.2 Phone Status.....	14
2.3 Basic network settings.....	15
2.4 Wireless Network.....	16
Activating the Wi-Fi Mode.....	16
Connecting to the Wireless Network.....	16
Viewing Wireless Network Information.....	17
Disconnecting Wireless Network Connection.....	17
Deactivating the Wi-Fi Mode.....	17
Modify Wi-Fi Band.....	18
2.5 Registration.....	18
Phone interface Registration.....	18

Web Registration	19
2.6 M1-M6 Configuration	20
Phone interface Registration	20
Web interface Registration	20
Chapter 3 Call Features	21
3.1 Placing Calls	21
Placing a Call from the Dialer	21
Placing Multiple Calls	22
Placing a Call from the Call History	22
Placing a Call from the Directory	23
Placing a Call using the RJ9 headset	23
Placing a Call using the DECT headset	23
3.2 Answering Calls	24
Answering a Call	24
Answering a Call When in a Call.....	24
Answering a Call Automatically.....	25
3.3 Disabling Call Waiting.....	25
3.4 Silencing or Rejecting Incoming Calls	25
Rejecting Calls with Do Not Disturb (DND)	25
3.5 Ending Calls	26
3.6 Muting/Unmuting Audio.....	26
3.7 Holding and Resuming Calls.....	27
Holding a Call.....	27
Resuming a Held Call.....	27
3.8 Redirecting Incoming Calls	27
Forwarding All Incoming Calls to a Contact.....	27
Forwarding All Incoming Calls on All Lines.....	28
Deactivating Call Forward	28
Diverting Calls to a Contact	28

3.9 Call Waiting	29
Phone interface configuration	29
Web interface configuration	29
3.10 Transferring Calls	29
Performing a Blind Transfer	29
Performing an Attended Transfer	30
3.11 Conference Calls	30
Setting Up a Local Conference Call	30
Holding or Resuming a Conference Call	31
Splitting a Conference Call	31
Ending a Conference Call	31
3.12 USB Flash Drive Recording	31
Enable USB Flash Drive Recording	31
Call Recording	32
View Recording Files	32
Recording Settings on the LCD screen	33
Recording Settings on the Web Interface	34
Chapter 4 Advanced Call Features	36
4.1 Intercom	36
Configuring Intercom function	36
Using intercom	36
4.2 Paging	37
Configuring Paging function	37
Using Paging	37
4.3 Voice Mail	38
Leaving Voice Mails	38
Listening to Voice Mails	38
4.4 Text Message	39
New Message	39

Viewing text messages	40
Save Text message	41
4.5 MWI (Message Waiting Indicator)	42
4.6 Directory	43
Local Contacts	43
Blacklist	46
4.7 Remote Phone Book	48
Remote phonebook updated to local (xml).....	48
Remote Phonebook.....	50
4.8 LDAP	51
4.9 Call History	52
Viewing History Records	52
Saving a History Record to Local Directory.....	52
Saving a History Record to Blacklist	53
Deleting History Records	53
4.10 Hot desking	53
Configure Hot desking	54
Use Hot desking	54
4.11 Beeper	55
HB01 Call Button.....	55
PB01 USB Panic Button	56
Chapter 5 Customizing Your Phone	57
5.1 Basic Setting	57
Backlight	57
Language	57
Time & Date	58
Changing the Administrator Password	58
Call Immediately key	58
Phone lock	59

5.2 Audio Settings	59
Adjusting the Volume.....	59
Setting the Ring Tone	59
5.3 AP Mode.....	60
Enable AP Mode.....	60
Chapter 6 Maintaining Your Phone	62
6.1 Rebooting Your Phone.....	62
6.2 Resetting to Factory Settings.....	62

About This Guide

Thank you for choosing Flyingvoice P23 Series IP phone, which delivers the industry's leading HD audio quality and a wide range of business telephony features, such as Call Hold, Call Transfer, Busy Lamp Field, Call Recording, Paging and Conference over an IP network. Meanwhile, it features a compact appearance, robust performance and cost efficiency for daily desktop voice communications.

This guide provides everything you need to quickly use your new phone. Firstly, verify with your system administrator that the IP network is ready for phone configuration. Also be sure to read the Quick Start Guide which can be found in your phone package before you set up and use the IP phone. As you read this guide, keep in mind that some features are configurable by your system administrator or determined by your phone environment. As a result, some features may not be enabled or may operate differently on your phone. Additionally, the examples and graphics in this guide may not directly reflect what is displayed or is available on your phone screen.

Related Documentation

The following types of related documents are available on each page:

- Datasheet
- Quick start guide

Chapter 1 Introduction

This chapter provides the overview of phone hardware and screen layout, and how to navigate your phone for the best performance.

Topics

[Hardware Overview](#)

[LED Indicator](#)

[Screen and Icons](#)

[Entering Characters](#)


1.1 Hardware Overview

Topics

[P23G/P23GW Hardware](#)

P23G/P23GW Hardware

The P23 series takes the P23G IP phone as an example (P23G, P23GW look the same as it), and the main hardware components include the LCD interface and keypad, as follows.

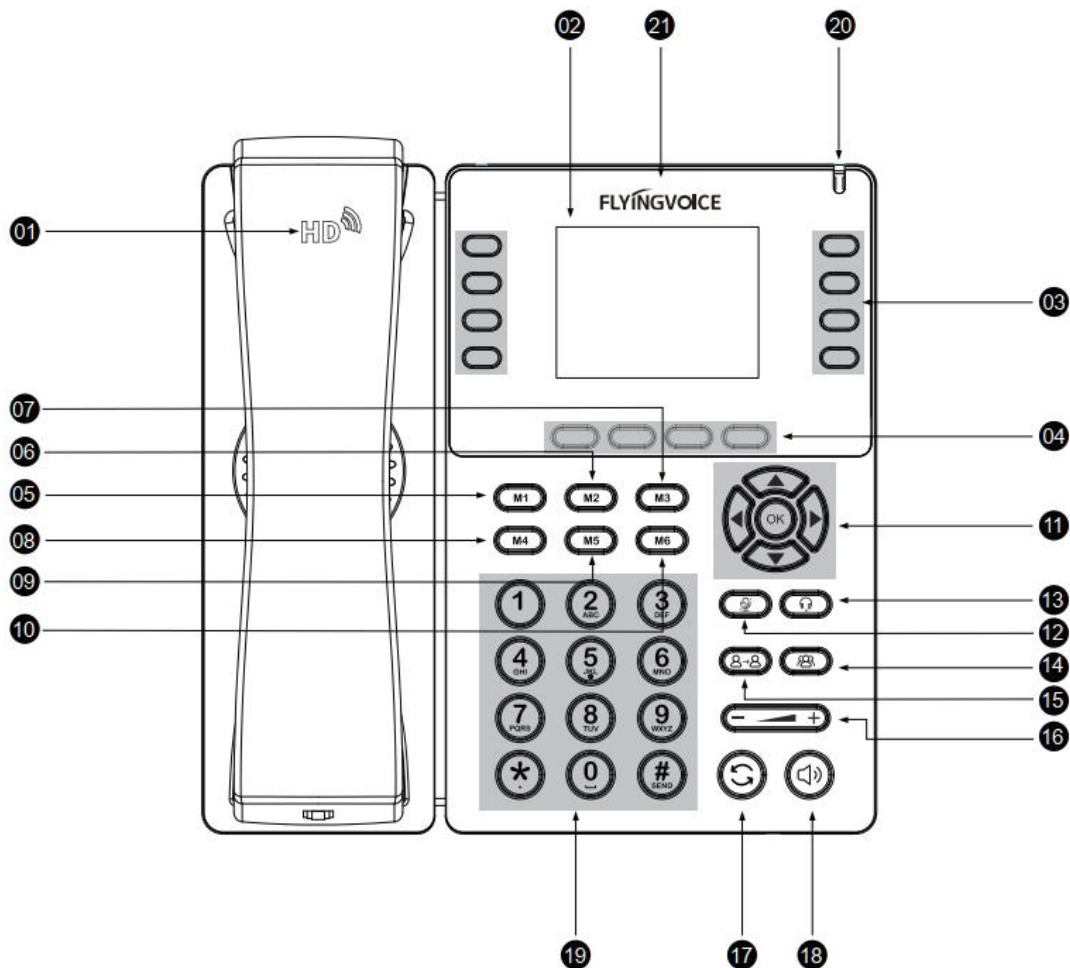

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

The main hardware components of the P23 Series IP phone are described as follows.

NO.	Item	Description
1	Handset	Handset to pick up and answer call
2	Phone Screen	Shows information about your phone, such as calls, messages, soft keys, time and date
3	Line Keys	Access your phone lines and features
4	Soft Keys	Access the function displayed on the screen above the soft keys. The soft keys change depending on what you are doing at the time
5	M1	The default is speed dial, the number is empty and can be customized
6	M2	The default is speed dial, the number is empty and can be customized
7	M3	The default is speed dial, the number is empty and can be customized
8	M4	The default is speed dial, the number is empty and can be customized
9	M5	The default is speed dial, the number is empty and can be customized
10	M6	The default is speed dial, the number is empty and can be customized
11	Navigation Keys	Scroll through information or options displayed on the screen. Access History and Directory respectively
	OK Key	Confirms actions or answers incoming calls.
12	Mute Key	Toggles and indicates the mute feature. The key LED glows red when the call
13	Headset Key	Toggles and indicates the headset mode. The key LED glows green when headset mode is activated.
14	Conference Key	Join the Conference call
15	Transfer Key	Transfers a call to another party
16	Volume Key	Adjusts the volume of the handset, headset, and speaker

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

17	Redial Key	Redials a previously dialed number
18	Speakerphone Key	Toggles and indicates the hands-free (speakerphone) mode. The key LED glows green when the hands-free (speakerphone) mode is activated
19	Keypad	Provides the digits and special characters in context-sensitive applications
20	Power LED Indicator	Indicates call status, message status, and phone's system status
21	Logo	FLYINGVOICE Logo

1.2 LED Indicator

Power LED Indicator

The power LED indicator indicates the call, message and phone's system status.

LED Status	Description
Slowly-flashing red (5 flashes in 1s)	The phone is ringing
Slowly-flashing red (1 flashes in 1s, every 4s)	The phone receives missed calls or text message
Slowly-flashing red (2 flashes in 1s)	The phone receives voice message
OFF	The phone is powered off or idle

Line Key LED

The line key LED indicators are associated with the status of phone lines and features.

Line key LED (associated with the phone line)

LED Status	Description
Solid green	The line is registered or BLF is set to indicate that the monitored phone is idle
Fast-flashing red	The line receives an incoming call or the monitored phone is ringing
Red	The line is in conversation or BLF is set to indicate that the monitored phone is on a call

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

Off	The line is inactive
-----	----------------------

1.3 Screen and Icons

The user screens and icon indicators can help you navigate and understand the important information on the phone's status.

Topics

[Idle Screen](#)

[Calls Screen](#)


[Icons in the Status Bar](#)

[Line Key Icons](#)

[Other Icons](#)

Idle Screen

The idle screen is made up of the status bar, line keys, and soft keys. The time & date in the status bar or middle of the screen varies by phone models.

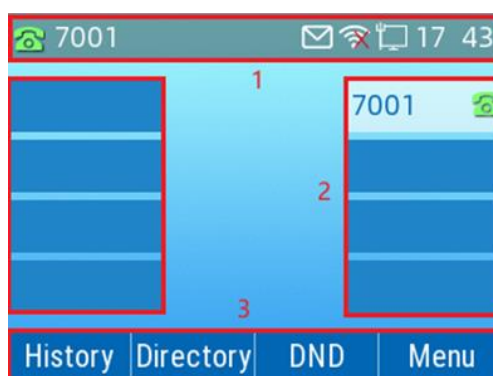


1. Status Bar: Display the default account, feature status icons, and the time. The status icons are displayed when features are activated.
2. Line Keys: Display the information associated with the line keys and feature keys on the phone.
3. Soft Keys: Display the information associated with the feature keys.

Calls Screen

All of your active and held calls are displayed on the calls screen. You can press up or down navigation key to switch among calls.

Check with your system administrator to find out if this feature is available on the phone. When there is an active call and a held call, the calls screen is shown below:

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

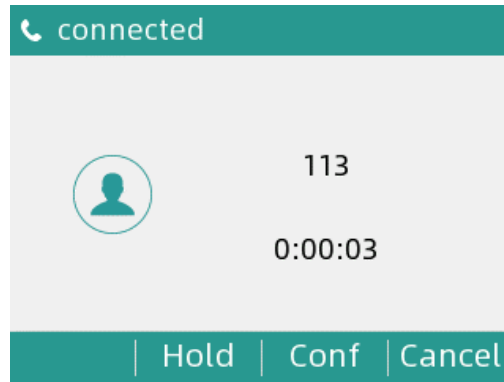

You can go to **Menu > Status** page to view Network and phone status. The phone screen is shown below:

< Network	Phone	Account	1/4 >
1. Wi-Fi Status	Disconnected		
2. Vlan ID	30		
3. Mode	DHCP		
4. IPv4	192.168.81.56		
5. Wan Mask	255.255.254.0		
Back			

Icons in the Status Bar

Icons in the status bar vary by phone models.

Icon	Description	Icon	Description
	Wired network is available		Auto Answer
	Wired network is unreachable		Do Not Disturb (DND)
	Speaker mode		Keep Mute
	Handset mode		Ringer volume is 0
	Headset mode		Missed Calls
	Voice Mail		Call Forward
	Call is on hold		Recording
	Wi-Fi connected		Wi-Fi connection failed



Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

	USB drive connected		Text message
---	---------------------	---	--------------

Line Key Icons




Icons on the line key that vary by phone models.

Icon indicators (associated with line)


Icon	Description
	The private line is registered successfully
	Register failed

Other Icons




Call History

Icon	Description
	Received Calls
	Placed Calls
	Missed Calls

Contact





Icon	Description
	Default Contact Picture

Call

Icon	Description
	Waiting
	Ringing
	Calling

Icons displayed on the LCD interface (text message icons).

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

Icon	Description
	Unread text message
	Read text message
	Sent messages / Outbox
	Draft box information

1.4 Entering Characters

You can use the keypad keys on your phone to enter or update field information.

The following table describes how to enter different characters using the keypad keys.

Task	Action
Switch input modes	Press the ABC , abc , Ab2 , 2aB , or 123 soft key to switch the input modes.
Enter alphas	Select ABC , abc , 2aB mode. press the keys labeled with letters until your desired letter appears. press a keypad key repeatedly to view the character options and stop when the letter you want to enter is displayed in the field. Wait one second, and then enter the next letter.
Enter numbers	Select 123 mode, press the corresponding keys.
Enter special characters	Select ABC , abc , 2aB mode, press * key or # key one or more times to enter one of the following special characters: * key: *,.!@/:-;+&%=<> £ \$¥¤[]{}~^i¿\$#" # key: # In 123 mode, you can press the * key to choose the following special characters: .*/@[].
Insert space	Select ABC , abc , 2aB mode, press the 0 key.
Delete one or more characters	Position the cursor to the right of the character, and select the Delete soft key.

Chapter 2 Getting Started

This chapter describes the introductory operation of the P23 Series phone and covers the For more information and help, please contact us.

Topic

[Phone initialization](#)

[Phone Status](#)

[Basic network settings](#)

[Wireless network settings](#)

2.1 Phone initialization

After the phone is powered on, the following steps will be performed.

1. the "FLYINGVOICE" logo is displayed on the LCD interface
2. When the phone is initialized, wait for the progress bar to finish loading.
3. After the phone starts normally, it can obtain network configuration through DHCP.

By default, the phone obtains network configuration such as IP address, subnet mask, default gateway address and DNS server through DHCP server.

Note: If the phone cannot get the network configuration through DHCP server, please do the basic network settings on page 15.

2.2 Phone Status

Procedure

You can press **Menu**, then press **Status** to view the Network and Phone status.

The phone screen is shown below:

< Network	Phone	Account	1/4 >
1. Wi-Fi Status	Disconnected		
2. Vlan ID	30		
3. Mode	DHCP		
4. IPv4	192.168.81.56		
5. Wan Mask	255.255.254.0		
Back			


2.3 Basic network settings

If the phone cannot get the network configuration through DHCP server, you need to set it manually.

The phone supports IP mode: IPv4, IPv6.

Set the IP address mode through the phone interface:


1. Press **Menu**->**Advanced Settings** (default password: admin)->**Network**->**WAN Port**

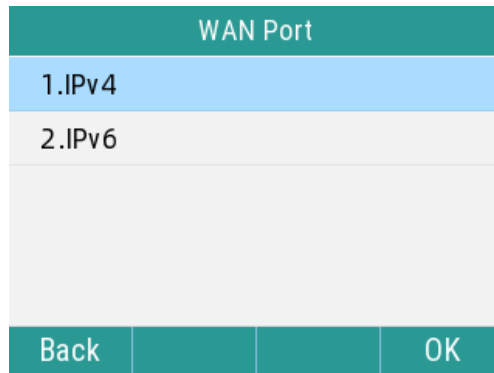

2. Select **IPv4** or **IPv6**
3. Press **Switch** key to switch the type of IPv4 WAN port, select **Static IP** and **DHCP**

Set a Static IPv4 address through the phone interface:

1. Press **Menu**->**Advanced Settings** (default password: admin)->**Network**->**WAN Port**->**IPv4**
2. Press **Switch** key to switch select **Static IP**
3. Enter the **IP address**, **Mask**, **Default Gateway**, **Primary DNS** and **Secondary DNS** in the corresponding area respectively

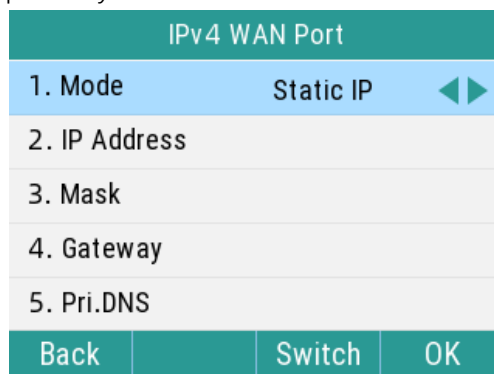

4. Press the **OK** to save the operation

2.4 Wireless Network

You can connect the phones to a wireless network if Wi-Fi is available within the area. For more information, contact your system administrator.

Topics

[Activating the Wi-Fi Mode](#)

[Connecting to the Wireless Network](#)

[Viewing the Wireless Network Information](#)

[Disconnecting the Wireless Network Connection](#)

[Deactivating the Wi-Fi Mode](#)

Activating the Wi-Fi Mode

You can activate the Wi-Fi mode to connect your phone to an available wireless network.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi**.
2. Select **On** from the **Wi-Fi** field.
3. Select **OK**.

The phone scans the available wireless networks in your area.

Connecting to the Wireless Network

After you have activated the Wi-Fi mode, you can connect the phone to the wireless network.

Connecting to an Available Wireless Network Manually

When you enable the Wi-Fi mode, the phone automatically connects to the saved wireless network, you can also connect it manually.

Before You Begin

Get the password of the wireless network from your system administrator. Make sure that the Wi-Fi mode is activated.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi**.
2. Press the **Available Network(s)**.
3. Optional: To research the available network, select **Scan**.

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.




4. Select the desired wireless network and select **Connect**.
5. If the network is secure, enter its password.
6. Select **OK**.

Viewing Wireless Network Information

You can view the wireless network information (for example, Profile Name, SSID or Signal Strength) when the Wi-Fi mode is activated.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi > Available Network(s)**

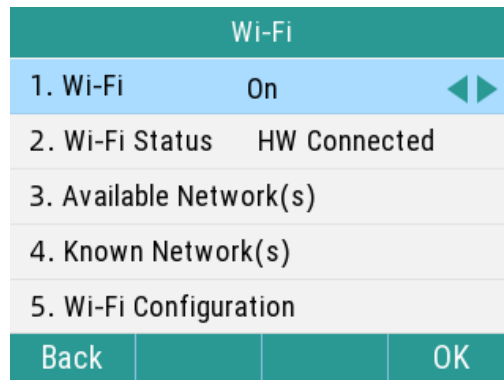

2. Select the desired network to view the detailed wireless network information.
If the phone is connected to a wireless network successfully, you can also navigate to **Menu > Basic > Wi-Fi > Wi-Fi Status** to view the connected wireless network information.

Disconnecting Wireless Network Connection

When you no longer want to connect to the current wireless network, you can disconnect it.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi**.
2. Select **Available Network(s)**.
3. Press the connected wireless network, and select **Discon**.

Tip: You can also disconnect the wireless network when deactivating the Wi-Fi mode.

Deactivating the Wi-Fi Mode

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

You should deactivate the Wi-Fi mode when you need to connect your phone to the wired network.

Note: When the phone uses the Wireless connection the Ethernet cable connection in the same time, the Wireless connection has the higher priority.

Procedure

1. Navigate to **Menu > Basic > Wi-Fi**.
2. Select **Off** from the **Wi-Fi** field.
3. Select **OK**.

Modify Wi-Fi Band

Switch WiFi scanning frequency band, only supported by P23GW

Procedure

1. The Wi-Fi scanning frequency band defaults is 2.4g.
2. Navigate to **Wi-Fi Configuration > Wi-Fi Band > Wi-Fi 2.4g or 5g**.
3. Select **OK** to restart to take effect.

2.5 Registration

Usually, the system administrator will pre-configure the relevant parameters and deploy all phones centrally, in this case, the phones are usually already registered with accounts.

The P23 Series phone supports 8 account registrations. If the phone is not registered, you need to register it manually.

Topic

[Phone interface Registration](#)

[Web Interface Registration](#)

Phone interface Registration

You can register one or more accounts on the phone

1. Press **Menu**->**Advanced Settings** (default password is admin)->**Account**
2. Select the account you want to set up, click **OK**
3. Press the **Switch** key to switch the account status, and choose to turn on
4. Fill in the corresponding information in the **Display Name, Registered Name, User Name, Password, Sip Server, SIP Port**, respectively
5. If you want to use outbound proxy server, please enter the corresponding server address in the corresponding proxy server option
6. Press the **OK** key to save the operation

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

Line 1		
1. Registration	Enable	
2. Display Name	7001	
3. Register Name	7001	
4. User Name	7001	
5. Password	*****	
Back	Switch	OK

Repeat steps 2-6 to complete the registration of all accounts.

Disable the account via the phone interface.

1. Press **Menu**->**Advanced Settings** (default password is admin)->**Account**
2. Select the account you want to set, press Enter
3. Press **Switch** to switch the account status, select **Disable**
4. Press the **OK** Key to save

Web Registration

You can register one or more accounts on the webpage

1. After checking the IP address of the phone, enter the IP address in the browser and enter the web management page of the phone

Tip: Default Administrator Username and Password are "admin"

2. Click **SIP Account**->**Line x**, drop down and select **Line Enable** to **enable**, fill in user information (**Display Name**, **Phone Name**, **Account**, **Password**), Proxy and Registration information (**Proxy server**, **Proxy port**, **Transport**)

Status	Network	Wireless	SIP Account	Phone	Administration					
Line 1	Line 2	Line 3	Line 4	Line 5	Line 6	Line 7	Line 8	SIP Settings	VoIP QoS	Ring

Basic
Register Status
Register Status: Registered
Basic Setup
Line Enable: Enable
Subscriber Information
Display Name: 7001
Account: 7001
Hash Password:
Phone Number: 7001
Password: *****
Proxy and Registration
Proxy Server: 192.168.50.19
Outbound Server:
Backup Outbound Server:
Allow DHCP Option 120 to Override SIP Server: Disable
Proxy Port: 5060
Outbound Port: 5060
Backup Outbound Port: 5060
Transport: UDP

Help
Basic:
Set the basic parameters provided by your VoIP Service Provider. Phone Number and Account Details.
Audio Configuration:
Select the relevant audio Codec that matches your VoIP Service Provider settings.
Supplementary Service Subscription:
Call Waiting - This call feature informs the user if there is one more call coming on his number.
Proxy Port:
Different proxy port numbers need to be configured on each FXS setting when the device is used as an intercom - i.e. without the presence of a SIP server.

3. Click **Save & Apply** to save the operation

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

Disable the account via the web interface :

1. Click **SIP Account**->**Line x**, drop down and select Account **Disable**

Tips

Incorrect network settings may cause the network to be unavailable and may also have an impact on the performance of the network. To learn more about the parameters, please consult your system administrator.

2.6 M1-M6 Configuration

M1-M6, the default type is SpeedDial, you need to configure it in the Web Page.

Tips: The value defaults to Null, the line defaults to Line1.

Phone interface Registration

Procedure

1. Long press the **M1** key (M1~M6) -> Select the account -> fill in the number.
2. Click **Save**.

Web interface Registration

Procedure

1. Press **Phone**-> **Programmable Key**
2. M1~M6-> Fill in the number in the **value**
3. Click **Save** and wait for it to take effect.

Note: You can also Select the type or line you want, and fill in the value.

Key	Type	Line	Value	Label	Extension
SoftKey 1	History				
SoftKey 2	Directory				
SoftKey 3	DND				
SoftKey 4	Menu				
Up	N/A				
Down	N/A				
Left	SwitchAccour				
Right	SwitchAccour				
OK	Status				
Conference	N/A				
Redial	N/A				
TRAN	N/A				
M1	SpeedDial	Line1			
M2	SpeedDial	Line1			
M3	SpeedDial	Line1			
M4	SpeedDial	Line1			
M5	SpeedDial	Line1			
M6	SpeedDial	Line1			

Help

SpeedDial:
You can configure this key as a simplified speed dial key. This key function allows you to easily access the most frequently dialed numbers.

EventType:
The function of a key can be changed according to different needs.

Save Cancel Reboot

Chapter 3 Call Features

You can use the phone to place and answer calls, ignore incoming calls, transfer a call to someone else, conduct a conference call and perform other basic call features.

Topics

[Placing Calls](#)

[Answering Calls](#)

[Disabling Call Waiting](#)

[Silencing or Rejecting Incoming Calls](#)

[Ending Calls](#)

[Muting/Unmuting Audio](#)

[Holding and Resuming Calls](#)

[Redirecting Incoming Calls](#)

[Redirecting Incoming Calls](#)

[Call Waiting](#)

[Transferring Calls](#)

[Conference Calls](#)

3.1 Placing Calls

You can use your phone like a regular phone to place calls in many ways easily.

Topics

[Placing a Call from the Dialer](#)

[Placing Multiple Calls](#)

[Redialing a Number](#)

[Placing a Call from the Call History](#)



[Placing a Call from the Directory](#)

Placing a Call from the Dialer


The Dialer enables you to enter a number to place a call, and it displays a list of previously placed calls or contacts in your directory.

You can also select the desired contact from the search list, the placed call list or Directory.

Procedure

1. Do one of the following:
 - Start typing a phone number.
 - Select the desired line key.
 - Pick up the handset, press the Speakerphone key  or the HEADSET key .
2. Enter a number or select a contact.
3. Select **Send**.

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

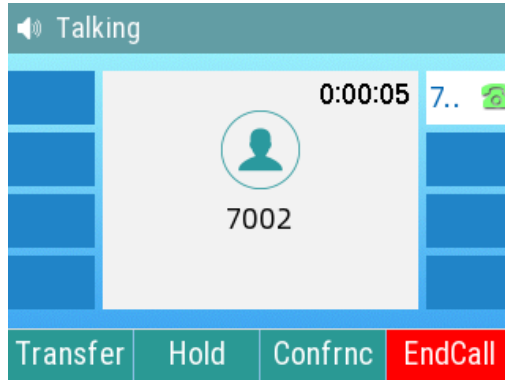


Tip: Your system administrator can enable the live dial-pad feature, which enables your phone to automatically dial out the phone number after some time without selecting **Send**.

Placing Multiple Calls

When you are in a call, you can hold your current call and place a new call.


Procedure

1. Press **Hold** to place the original call on hold.
2. Press **NewCall**, enter the desired number or select a contact.

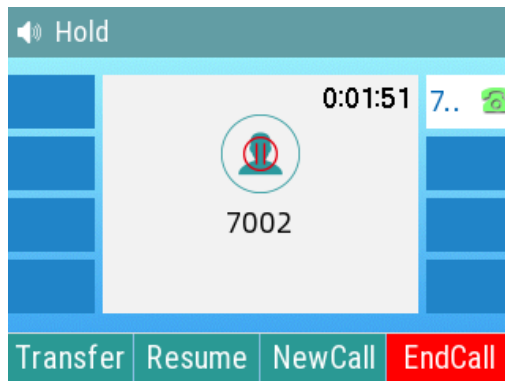

3. Select **Send**.

Tip: Only one call is active at any time, and other calls are on hold. You can press **Swap** to switch the call.

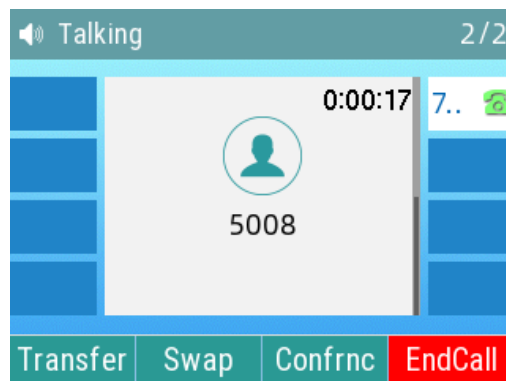

Placing a Call from the Call History

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

You can place calls to contacts from the History list, which contains the calls that were recently placed, answered, missed, or forwarded.

Procedure

1. Press **History**.

*The phone screen displays **All/Missed/Dialled/Received** call records.*

2. Select the desired number, it will make the call automatically.


Placing a Call from the Directory

You can place a call to a contact directly from your directory.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact and press the desired number.

Placing a Call using the RJ9 headset

Connect the headset, press  to activate the headset mode, enter the number and press the **Send** soft key.

Placing a Call using the DECT headset

Connect the headset, enter the number and press the **Send** soft key.

Tip: After the connection is completed, LCD interface display "USB headset connected".

Brands and models of DECT headsets supported by P23 series IP phones.

Brands	Models
Plantronics	CS520
	CS540
Jabra	PRO 920
	PRO 925
	PRO 9460
	PRO 9470
	Motion Office
	Engage 65 Stereo&Mono
Jabra	Engage 75 Convertible
	Engage 75 Stereo&Mono
Sennheiser	SDW5016

3.2 Answering Calls

When you receive a call, you can choose to answer it manually or automatically.

Topics

[Answering a Call](#)

[Answering a Call When in a Call](#)


[Answering a Call Automatically](#)

Answering a Call

When you receive an incoming call, the phone rings and the screen display the information of the incoming call. You can choose to answer the incoming call.

Procedure

1. Do one of the following:

- Pick up the handset.
- Press the Speakerphone key .
- Press the HEADSET key.
- Press **Answer**.


The call is answered in the speakerphone (hands-free) mode by default.

Tip: You can also select an RJ headset or DECT headset to answer.

Answering a Call When in a Call

You can answer a call when there is already an active call on your phone.

When you are in an active call and an incoming call arrives on the phone, a call waiting tone beeps, and the incoming call information is displayed.

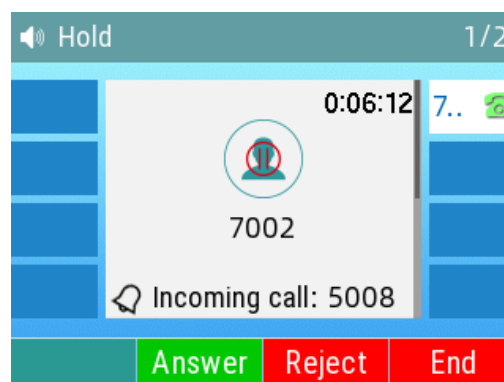

Procedure

1. Select **Answer**.

The active call is placed on hold, and the incoming call becomes active.

Tip:

You can disable the call waiting feature to reject the incoming call automatically during a call.

Answering a Call Automatically

The auto answer enables you to automatically answer an incoming call in speakerphone (hands-free) mode when your phone is idle.

Tip: When you are in an active call and an incoming call arrives on the phone, the incoming call will not be automatically answered even if the auto answer is enabled.

Your system administrator can configure the phone to automatically answer the incoming call after ending all calls.

Phone interface

Procedure

1. Navigate to **Menu > Features > Auto Answer > Auto Answer Settings**.
2. Enable the **Auto Answer**.
3. Select **OK**.

Web interface

Procedure

1. Navigate to **Phone-> Preferences-> Miscellaneous->Auto Answer All Phone Number -> Save & Apply**

Miscellaneous	
Auto Answer All Phone Number	Disable ▾
Auto Answer Delay Time	Disable Enable
Dial Time Out (IDT)	5
Auto On-hook Mode	Enable ▾

3.3 Disabling Call Waiting

If the call waiting feature is disabled, when there is already a call, the new incoming call will be rejected automatically.

Procedure

1. Navigate to **Menu > Features > Call Waiting > Call Waiting Settings**.
2. Select **Disable**.
3. Select **OK**.

3.4 Silencing or Rejecting Incoming Calls

When you receive an incoming call, you can choose to silence or reject the call instead of answering.

Rejecting Calls with Do Not Disturb (DND)

You can enable DND to reject all incoming calls automatically when you do not want to be

interrupted.

Topics

[Rejecting Calls with DND](#)

[Deactivating DND](#)

Rejecting Calls with DND

Procedure

1. Navigate to **Menu > Features > DND**.
2. Select **Enable** from the DND Status field.
3. Select **OK**.

The DND icon  appears in the status bar.

Tip: To activate or deactivate DND quickly, press the DND soft key when the phone is idle.

Deactivating DND

You can deactivate DND when you are ready to resume receiving calls again.

Procedure

1. Navigate to **Menu > Features > DND**.
2. Select **Disable** from the DND Status field.
3. Select **OK**.


The DND icon  disappears from the status bar.

Tip: To deactivate DND quickly, press the **DND** soft key when the phone is idle.

3.5 Ending Calls

You can end the current call at any time.

Procedure

1. Do one of the following:
 - If you are using the handset, press the **Cancel** key or hang up the handset.
 - If you are using the headset, press the **Cancel** key.
 - If you are using the speakerphone, press the **Cancel** key, Speakerphone key .

3.6 Muting/Unmuting Audio

When you are in a call, you can mute the audio, so that you can hear the other person, but they cannot hear you.

Procedure

1. Press the MUTE key during a call.
2. Press the MUTE key again to unmute the call.

3.7 Holding and Resuming Calls

You can place an active call on hold and resume the call when you are ready. When you place a call on hold, the held party may hear the music played by its sever.

Topics

[Holding a Call](#)

[Resuming a Held Call](#)

Holding a Call

You can place an active call on hold on your phone.

Procedure

Press **Hold** during a call.

The phone ignores engaged audio devices (handset or headset) and plays beep in the Speakerphone (hands-free) mode by default.

Resuming a Held Call

You can view and resume a held call on the phone.

Procedure

Press **Resume**.

If multiple calls are placed on hold, select the desired call first.

Tip: When you have multiple calls on the phone and the current call is active, you can select **Swap** to swap to the held call.

3.8 Redirecting Incoming Calls

When you are not available to answer calls on your phone, you can forward the calls to another phone.

Topics

[Forwarding All Incoming Calls to a Contact](#)

[Forwarding All Incoming Calls on All Lines](#)

[Deactivating Call Forward](#)

[Diverting Calls to a Contact](#)


Forwarding All Incoming Calls to a Contact

You can set up the forwarding type which enables your phone to forward all incoming calls to a contact. There are three types of forwarding:

Always Forward: Forwards all incoming calls immediately.

Busy Forward: Forwards incoming calls when you are busy in a call.

No Answer Forward: Forwards incoming calls when no one answers the calls.

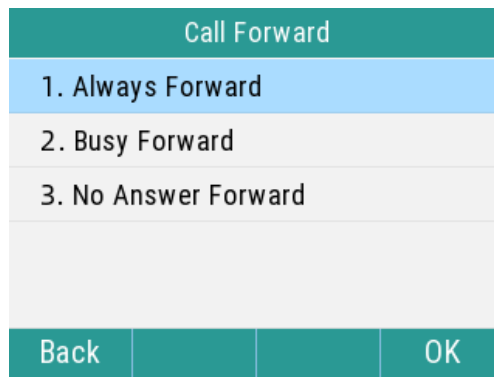

Forwarding All Incoming Calls on All Lines

You can forward all incoming calls on the phone.

Before You Begin

Check with your system administrator if the forward on code or off code is required. If required, get it from your system administrator.

Procedure

1. Navigate to **Menu > Features > Call Forward**.
2. Select the desired forwarding type and select **Enable** from the corresponding field.
3. Enter the contact number you want to forward incoming calls to in the **Forward to** field.
4. If you select the **No Answer Forward** option, select the desired ring time to wait before forwarding from the field.
5. Optional: Enter the always/busy/no answer forward on code or off code respectively in the **On Code** or **Off Code** field.
6. Select **OK**.

The call forward icon  appears in the status bar.

Deactivating Call Forward

You can deactivate call forward when you no longer want to forward your calls.

Procedure

1. Navigate to **Menu > Features > Call Forward**.
2. Select the desired forwarding type and select **Disable** from the corresponding field.
3. Select **OK**.

Diverting Calls to a Contact

You can divert all incoming calls from a particular contact to another contact. Auto divert has precedence over call forward.

Procedure

1. Select **Directory (Dir)** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or All Contacts.

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

3. Highlight the desired contact, and select **Detail**.
4. Edit the contact information.
5. Enter a contact's number you want to divert the call to in the Auto Divert field.
6. Select **Save**.

3.9 Call Waiting

The call waiting feature can be turned on or off.

If the call waiting feature is enabled, new incoming calls can be answered during a call.

If call waiting is turned off, new calls will be automatically rejected during the call and a busy tone will be indicated.

Phone interface configuration

Procedure

1. Press **Menu->Features->Call Waiting->Call Waiting Settings**, click **Switch** key, select **On**
2. Press the **OK** key to save the operation

Web interface configuration

Procedure

1. **SIP Account-> Line x -> Call Waiting**, turn on call waiting, **save and apply**.

Call Waiting	Enable ▼	Hotline	<input type="text"/>
Enable MWI	Enable ▼	Voice Mailbox Numbers	*2
MWI Subscribe Enable	Disable ▼	Voice Mail Display	Disable ▼
MWI Subscription Period(Seconds)	3600	Outgoing Call Active Password
Outgoing Call Block Password	Emergency Call Num	<input type="text"/>

3.10 Transferring Calls

During a call, you can transfer the call to another contact. You can use one of two ways:

- **Blind Transfer:** Transfer a call directly to the third party without consulting.
- **Attended Transfer (Consultative Transfer):** Transfer a call with prior consulting.

Topics

[Performing a Blind Transfer](#)

[Performing an Attended Transfer](#)

Performing a Blind Transfer

You can transfer a call to another contact immediately without consulting with her/him first.

Procedure

1. Press **Transfer (Trans)** during a call.
2. Do one of the following:
 - Enter the number or select a contact from the placed call list you want to transfer to.
 - Press **Directory (Dir)**. Select the desired contact from the Directory list.
3. Press TRAN key or BXFER to complete the transfer.

Tip: If you are using a handset, the transfer can be completed by hanging up the handset. Your system administrator can also set your phone to perform attended transfer when using a Transfer key.

Performing an Attended Transfer

You can transfer a call to another contact after consulting with her/him.

Procedure

1. Press **Transfer (Trans)** during a call.
2. Do one of the following:
 - Enter the number or select a contact from the placed call list you want to transfer to.
 - Press **Directory (Dir)**. Select the desired contact from the Directory list.
3. Wait until the third party answers the call, press TRAN key to complete the transfer.

3.11 Conference Calls

The phone supports a 6-way local conference and multi-way network conference. During the conference, follow these tips:

- Use the handset or a headset if you're in an open environment.
- Mute your microphone when you are not speaking, especially in noisy environments.
- Avoid tapping or rustling papers near the microphone.
- Speak in your normal voice without shouting.

Tip: Check with your system administrator to find out if the local conference is enabled on your phone.

Topics

[Setting Up a Local Conference Call](#)

[Holding or Resuming a Conference Call](#)

[Splitting a Conference Call](#)

[Ending a Conference Call](#)

Setting Up a Local Conference Call

You can set up a local conference call with up to five contacts.

Procedure

1. Place a call to the first party.
2. When the first party answers the call, select **Conference (Confnc)** to place a new call. The active call is placed on hold.
3. Dial the second party's number.

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

You can also select the desired contact from the search list, or select a contact from the placed call list or Directory before you enter the number.

4. Wait until the second party answers the call, press the **Conference (Confrnc)** key.
5. At this point, a three-person meeting was generated.

Holding or Resuming a Conference Call

When you place a conference call on hold, other participants cannot hear each other until you resume the held conference call.

Procedure

1. Press **Hold** to place the conference on hold.
2. Press **Resume** to resume the held conference call.

Splitting a Conference Call

You can split the conference call into individual calls. After the split, the conference call ends, and other parties are on hold. Press **Resume** to resume one of the held call or hang up.

Procedure

1. Select **Split**.
2. Press the navigation key up or down to select a held call.
3. Press **Resume**.

Ending a Conference Call

When you end the conference call, the other parties drop the call.

Procedure

1. Select **End Call (EndCall)**.

3.12 USB Flash Drive Recording

Topic

[Enable USB flash drive record](#)


[Call recording](#)

[View Recording Files](#)

[Phone setting recording](#)

[Web setting recording](#)

Enable USB Flash Drive Recording


1. Insert the USB flash drive into the USB port of the phone, the status bar shows the icon .
2. Press **Menu->Features->USB Record**.

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.


3. Press ◀ or ▶ to select USB Record **Enable**.
4. Press the **OK** key.

Call Recording

1. Dial an extension of the other party, press **More**->**Start REC**.

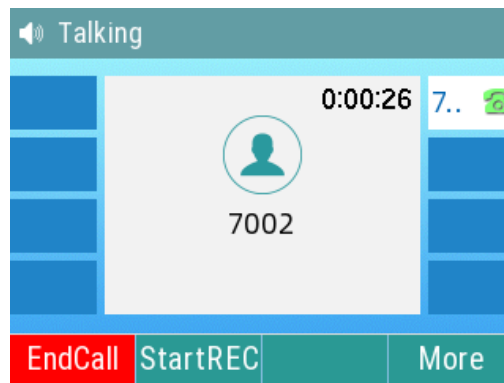

2. When finished with the recording, press the **StopReC** key to Pause the recording.

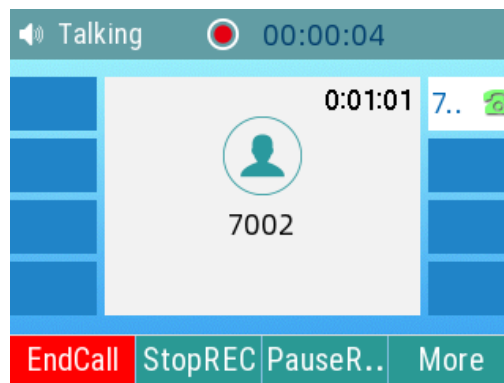


3. During the recording process, you can press the **PauseREC** and **ResumeREC** keys. It also supports stop recording and then start recording again, you can record multiple recordings


View Recording Files

1. Press **Menu**->**Features**->**USB Record**->**Recording Files**
2. Search for recording files: enter the file name in the search box to find the file
3. Listen to the recording file: press the recording file, press the play key to listen to the recording content, you can also press the **Fast Forward** key, **Fast Rewind** key, drag the screen progress bar to listen to the specified audio area.

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

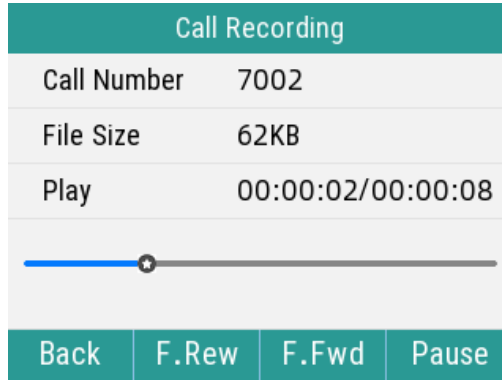


- View recording details: press the **Option** to the right of a recording file in the list and Select **Details**.

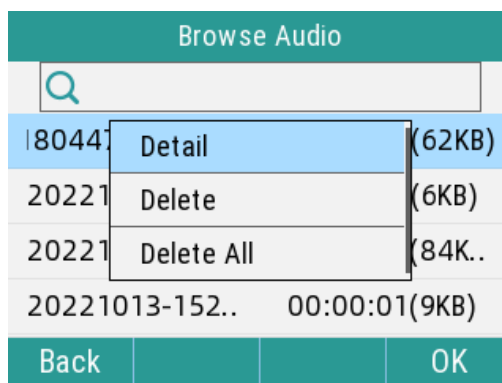

- Delete a single recording file: press **Delete** in the pop-up box, prompting "Delete selected item?".
- Delete all recording file: press **Delete All** in the pop-up box, prompting "Delete All?".

Recording Settings on the LCD screen


- Press **Menu->Features-> USB Record->Recording Settings**
- Press the **Call Recording Mode**, press \odot or \odot , select the call recording mode **Manual Recording or Automatic Recording** (The default is Manual Recording), press the **OK** key.

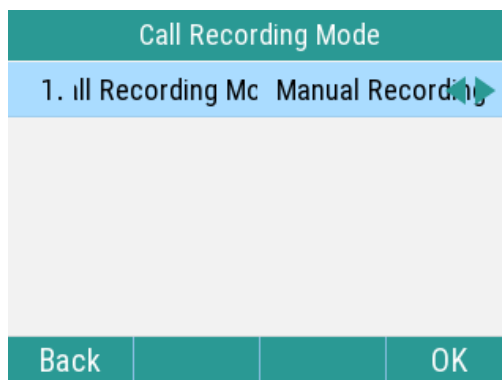

- Press **Recording File Settings**, Swap Delete manually or Auto Delete when the U flash

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

drive capacity is full (default is Delete manually), press the **OK** key.

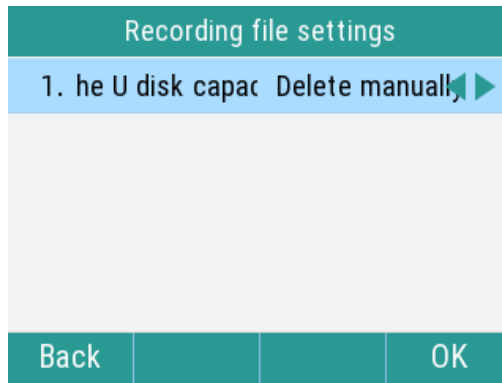


4. You can press **Browse storage space** to view the **Total** space, **Used** space and **Free**(available) space.


Recording Settings on the Web Interface

1. On your phone, press **Menu**->**Status**, check the IPv4 address of the phone, log into the phone's web interface with it, go to **Phone** -> **Call Recording** page.

2. Modify the recording settings: **Recording query** -> **Recording settings**, drop down and select **Recording mode** as U flash drive recording, you can select the call recording as **Manual recording/Automatic recording**, select the **Recording deletion mode** as manual deletion/automatic deletion, click **save** key.

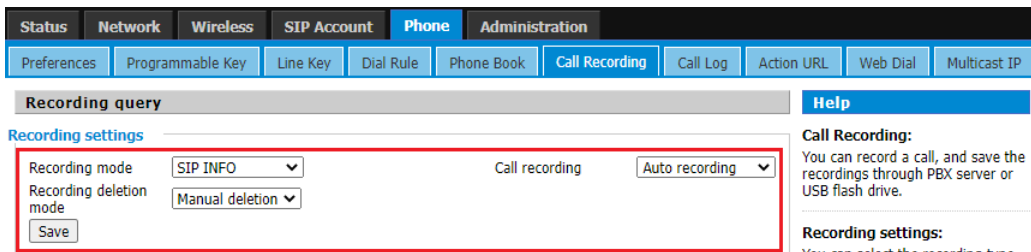

3. Search for recording files: **Recording query**->**Recording files**, enter the recording file name in the search box, press the **SCAN** key to retrieve the desired recording file.

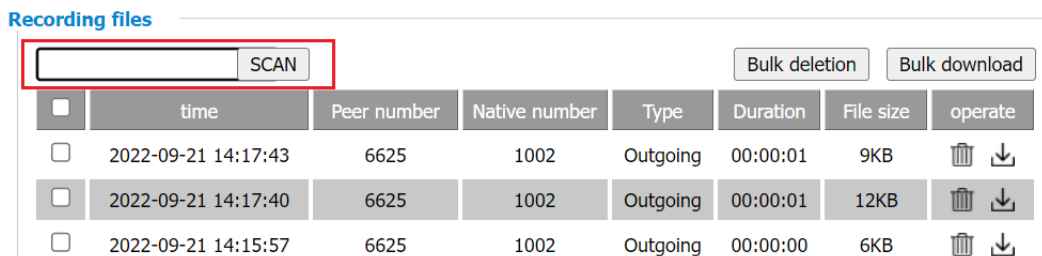

4. Delete recording file: In the **Recording query**->**Recording files** page, select the desired file, click the **delete** icon on the right side of the file list, or click **Bulk deletion** after selecting multiple files, the interface pops up a prompt box, click **OK**.

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

5. Download recording file: In the **Recording query** -> **recording files** page, click the **download** icon on the right side of the file list or click **Bulk download** after selecting multiple file

Chapter 4 Advanced Call Features

You can perform some server-dependent tasks on the phone. Contact your system administrator to find out if your phone supports these advanced call features.

Topic

[Paging](#)

[Voice Mail](#)

[Text Message](#)

[MWI \(Message Waiting Indicator\)](#)

[Directory](#)

[Remote Phone Book](#)

[LDAP](#)

[Call History](#)

[Hot desking](#)

[Beeper](#)

4.1 Intercom

The server side configures the account to use the intercom function.

Tip: Not all servers support intercom function. To find out more information, please contact your system administrator.

Configuring Intercom function

The server side configures the account to use the intercom function, and sets up the paging/intercom group number.

Procedure:

1. Finish configuring paging on the PBX
2. Then log into the phone's web interface, go to **Phone->Line key** page, **type** select **Intercom**, enter the group number into the value, then click the **Save** button.

The screenshot shows the 'Line Key' configuration page in the phone's web interface. The 'Type' is set to 'Intercom' and the 'Value' is '6604'. The 'Label' is 'Intercom'. The 'Extension' is empty. The 'Help' sidebar on the right contains the following text:

SpeedDial:
You can configure this key as a simplified speed dial key. This key function allows you to easily access the most frequently dialed numbers.

EventType:
The function of a key can be changed according to different needs.

3. After that, you can press the configured programmable key to use the function.

Using intercom

Intercom supports the following functions:

- Calling intercom account
- Answering intercom calls

Calling intercom account:

1. When the phone is in standby status, press the **Intercom key** or **Intercom programmable key** to call the intercom number on the server side that has the Intercom function enabled.
2. Press the **Speakerphone key** or **ENDCall** soft key to end the call.

To answer intercom call:

The called party is automatically connected to the call, no need to answer it manually.

4.2 Paging

You can use the paging feature to easily and conveniently send time-sensitive announcements to every member of your paging group.

Tip: Paging is not supported by all servers. For more information, please contact your system administrator.

Configuring Paging function

The server side configures the account to use the paging function, and sets up the paging/intercom group number.

Procedure:

1. Finish configuring paging on the PBX
2. Then log into the phone's web interface, go to **Phone->Line key** page, **type** select **Paging**, enter the group number into the value, then click the **Save** button.

The screenshot shows the 'Line Key' configuration page in a web interface. The navigation tabs at the top include Status, Network, Wireless, SIP Account, Phone (selected), and Administration. Under the 'Phone' tab, there are sub-tabs: Preferences, Programmable Key, Line Key (selected), Dial Rule, Phone Book, Call Recording, Call Log, Action URL, and Web Dial. The main content area is titled 'Dsskey' and contains a table with columns: Key, Type, Line, Value, Label, and Extension. The table has 10 rows, labeled 'Line Key1' through 'Line Key10'. 'Line Key2' is configured with 'Paging' as the Type, 'Line3' as the Line, '7002' as the Value, and 'Paging' as the Label. Other keys are set to 'Line' or 'N/A'. To the right of the table is a 'Help' section with two entries: 'SpeedDial:' and 'EventType:'. The 'SpeedDial:' entry explains that a simplified speed dial function allows for frequent numbers. The 'EventType:' entry states that the function of a key can be changed according to needs.

Key	Type	Line	Value	Label	Extension
Line Key1	Line	Line1			
Line Key2	Paging	Line3	7002	Paging	
Line Key3	Line	Line3			
Line Key4	Line	Line4			
Line Key5	Line	Line5			
Line Key6	Line	Line6			
Line Key7	Line	Line7			
Line Key8	Line	Line8			
Line Key9	N/A				
Line Key10	N/A				

3. After that, you can press the configured programmable key to use the function.

Using Paging

Paging supports the following functions.

- Calling paging account
- Answering paging calls

Calling a paging account:

1. When the phone is in standby status, press the **Paging key** or **Paging programmable key** to call the paging number on the server side that has the paging function enabled.
2. Press the **Speakerphone key** or **ENDCall** soft key to end the call.

Answering a paging call:

When there is a paging incoming call, the phone will answer the call automatically. You can press the **Speakerphone key** and the **ENDCall soft key** to end the call.

4.3 Voice Mail

Voice Mail feature allows you to leave voice messages for someone or listen to your voice mail messages on your IP phones.

This feature is set up on the server-side and not all servers support this feature.

Topics

[Leaving Voice Mails](#)

[Listening to Voice Mails](#)

Leaving Voice Mails

You can leave a voice mail to someone who is busy or inconvenient to answer the call.

Procedure

1. Follow the voice prompts to leave a voice mail.
2. Hang up to complete the voice mail.

Listening to Voice Mails

You can listen to your voice mails on the phone, to obtain voice information sent by a contact.

Before You Begin

You need to set the voice mail code in advance.

Procedure

1. Navigate to **Menu > Message > Voice Mail**.

The phone screen displays the amount of new and old voice mails.


2. Highlight an account, and then select **Connect**.
3. Follow the voice prompt to listen to your voice mails.


Tip: When the phone prompts that the phone receives a new voice mail, you can press the **Connect** soft key to dial out the voice mail access code directly.

4.4 Text Message

The phone supports the functions of newly sending text messages, viewing sent text messages, receiving and viewing read/unread text messages, saving sent failed text messages, deleting text messages, etc. The main contents include the following.

- New Message
- Inbox
- Sentbox
- Outbox
- Draftbox

When a new text message is received, the power indicator flashes red slowly, the LCD interface indicates "n New text messages", and the voice message icon  is displayed in the status bar of the main interface.

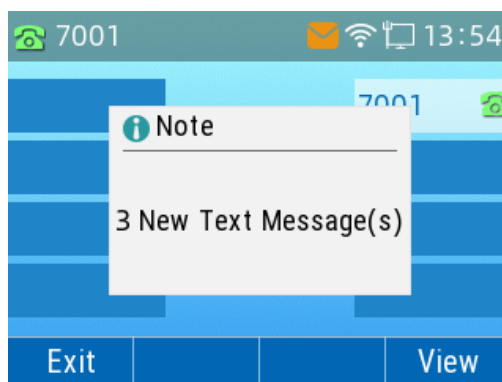


Description: After exiting the text message prompt window, the unread prompt window will not pop up again until there is a new text message, or an account with an unread text message after re-registration.

New Message

Procedure

 1. Press **Menu->Message->Text Message->New Message**
2. Enter the text message content, and the text message cannot be empty



Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.


- When finished, Press **Send** soft key, press the ◀ or ▶ key to switch the sender account, and then press the ▲ or ▼ key to fill in the recipient account.
- After filling in the message, press the **Send** soft button, and if "**Sending Message...**" is prompted, it means the message has been sent to the recipient, if "**Fail to send**" is prompted, it means the recipient does not exist or other errors, the text message will be saved in the **Outbox** and can be changed and resend.

Viewing text messages


To view received messages.

Procedure

- Press **Menu**->**Message**->**Text Message**->**Inbox**
- You can select one message and press the **View** to view the content of this message.

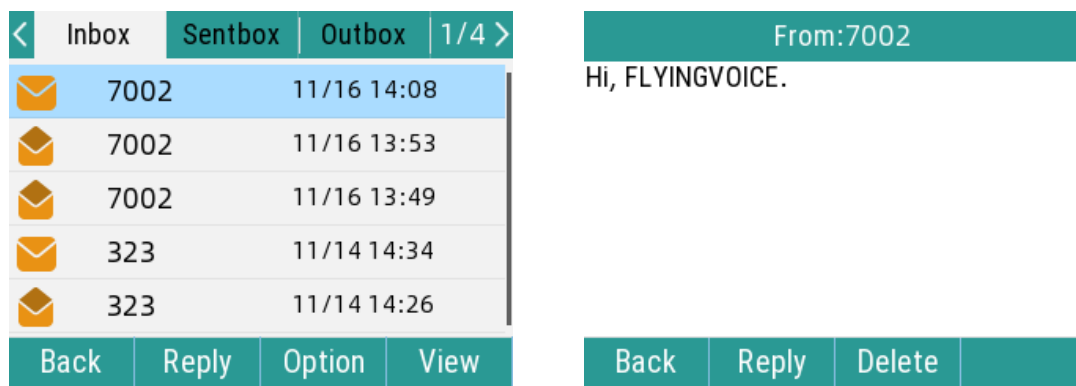

When viewing a text message, you can press the **Reply** to reply to the message directly; you can also press the **Delete** key to delete the message, or press **Option** in the received list to select **Delete** or **Delete All**.

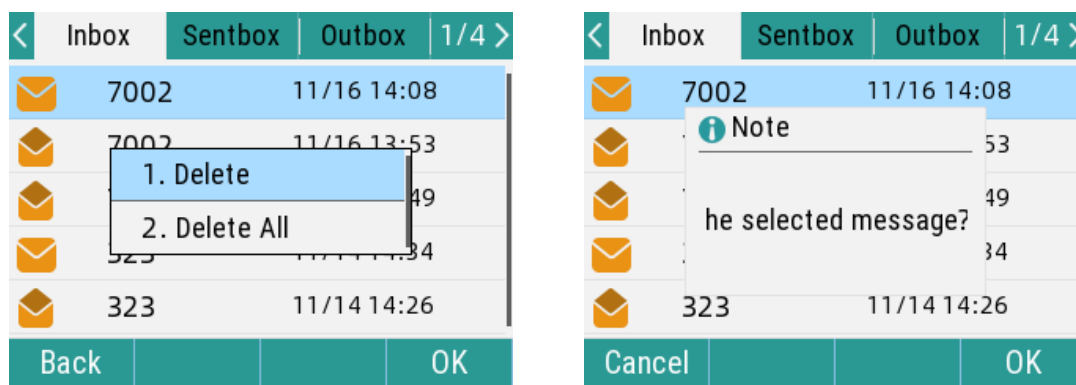


To view sent messages:


Procedure

- Press **Menu**->**Message**->**Text Message**->**Sentbox**

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

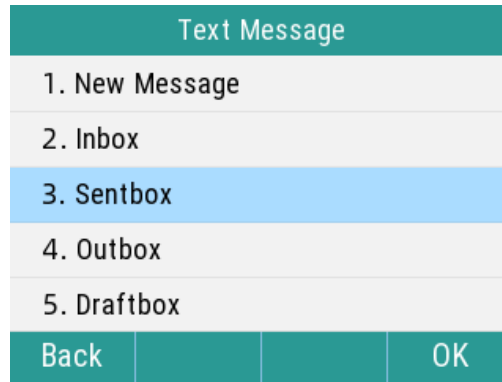

2. You can select one message and press the **View** to view the content of this message.

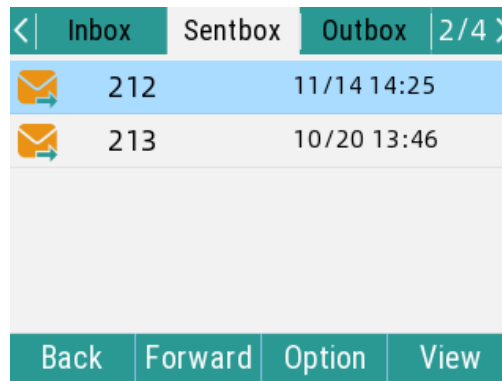


When viewing a text message, you can press **Forward** to transfer the message to another account; you can also press the **Delete** to delete the message, or press the **Option** in the Sentbox message list to select **Delete** or **Delete All**.

Save Text message


Save to outbox: When sending a text message, it will be automatically saved to the **outbox** after sending failure.

Procedure

1. Press **Menu**->**Message**->**Text Message**->**Outbox**.

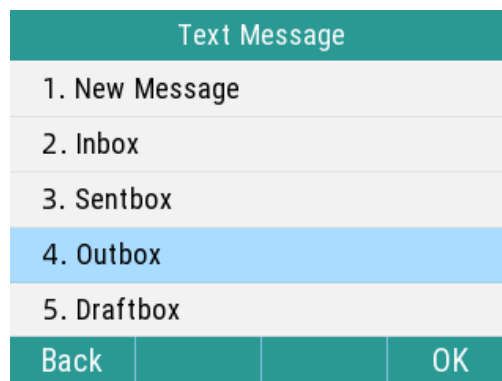

2. Display the list of failed messages, you can one message, press the **View** to view the message content

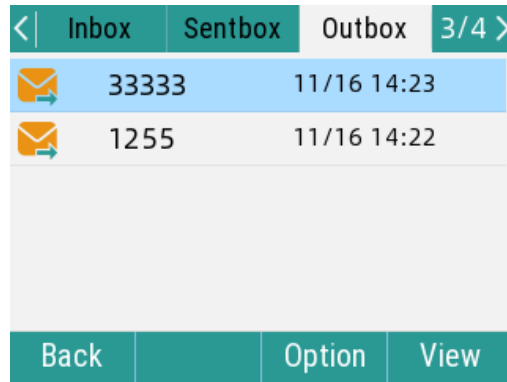


When viewing a text message, you can press **Forward** to transfer the message to another account; you can also press the **Delete** to delete the message, or press the **Option** in the Sentbox message list to select **Delete** or **Delete All**.


Save to Draftbox: When sending a message, if it is not sent out and you quit editing the message, it will be automatically saved to the draftbox

Procedure

1. Press **Menu**->**Message**->**Text Message**->**Draftbox**

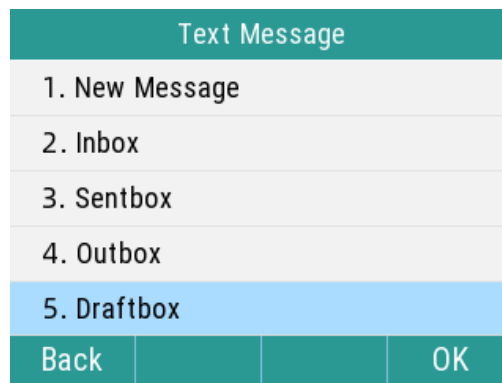

Display the list of unsent messages, select one message, and press **Send** to send the text message directly

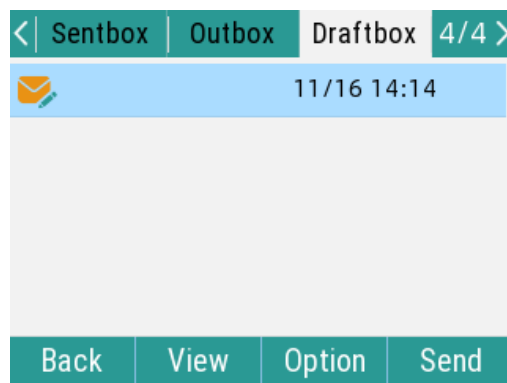

Press **View** to view the text message; or press the **Option** to **Delete** or **Delete all**

4.5 MWI (Message Waiting Indicator)

When a voice message is received, the phone will prompt messages, the voice message icons

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

appear on the LCD interface, and the power indicator slowly flashes red. When all voice messages are checked or deleted, the voice icon disappears and the power indicator turns off.

Tip: Not all servers support the MWI function. For more information, please consult your system administrator.

Option	Description
MWI Enabled	Enable or disable MWI service
MWI Subscription Enabled	Before the MWI subscription cycle expires, the phone resends the MWI subscription request.

Tip: The type of MWI subscription service used by the phone (account-based or voice-message number-based) depends on the server selected. For more information, please consult your system administrator.

Procedure

To set up MWI enable via the web interface.

1. Click **SIP Account**->**Line x**->Supplementary Services
2. Enable MWI->Select **Enable**(Default Enable)
3. MWI subscription enable->select **Enable**
4. Click **Save & Apply** the save operation

Supplementary Services

Call Waiting	Enable ▾	Hotline	<input type="text"/>
Enable MWI	Enable ▾	Voice Mailbox Numbers	*2
MWI Subscribe Enable	Enable ▾	Voice Mail Display	Disable ▾
MWI Subscription Period(Seconds)	<input type="text" value="3600"/>	Outgoing Call Active Password	<input type="text" value="****"/>
Outgoing Call Block Password	<input type="text" value="****"/>	Feature Key Synchronization	Disable ▾
Emergency Call Num	<input type="text"/>		
Transfer on Conference Hang up	Disable ▾		

4.6 Directory

The phone provides several types of phone directories, which can be customized by your system administrator.

Topics

[Local Contacts](#)

[Blacklist](#)

Local Contacts

You can store up to 2000 contacts in your local directory, you can search, add, edit and delete a contact.

Topics

[Managing the Local Directory Groups](#)

[Managing the Local Directory Contacts](#)

[Moving a Local Directory Contact to Blacklist](#)

[Searching for Contacts](#)

Managing the Local Directory Groups

You can manage the Local Directory groups when the phone is idle.

Topics

[Adding Contact Groups](#)

[Editing Contact Groups](#)

[Deleting Contact Groups](#)

Adding Contact Groups

To organize your contacts and make them easier to find, you can add additional groups in the Local Directory.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select **AddGrp**.
3. Enter the desired group name and select **Ring Type**.
4. Select **Save**.

Editing Contact Groups

You can change or add the group's information.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Highlight the desired group.
3. Select **Option > Detail**.
4. Edit the group information.
5. Select **Save**.

Deleting Contact Groups

When you delete a contact group, the contacts in the group will not be deleted. You can view the contacts in **All Contacts** list.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Highlight the desired group.
3. Select **Option > Delete**.

The phone prompts you whether to delete the group.

4. Select **OK**.

Managing the Local Directory Contacts

You can manage the Local Directory contacts when the phone is idle.

Topics

[Adding Contacts](#)

[Viewing Contacts](#)

[Editing Contacts](#)

[Deleting a Contact](#)

[Deleting All Contacts](#)

Adding Contacts

When you add a contact to your Local Directory, you can choose how much information you want to enter for your contact. You are required to enter a contact name at least for each new contact.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Select **Add**.
4. Enter your contact's information.
5. Select the desired account from the **Account** field.
6. Select **Save**.

Viewing Contacts

You can view the local contacts from the Local Directory on your phone.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.

The contact names are displayed in alphabetical order.

Editing Contacts

You can update your contacts' information.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact, and select **Detail**.
4. Edit the contact information.
5. Select **Save**.

Deleting a Contact

You can delete any contact from the Local Directory.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.

3. Click on the right side of the list-**more**, and select **Delete**.

Tip: The phone prompts you whether to delete the contact.

4. Select **OK**.

Deleting All Contacts

You can delete all contacts from the Local Directory.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Select **Option > Delete All**.

The phone prompts you whether to delete all contacts.

4. Select **OK**.

Moving a Local Directory Contact to Blacklist

You can move a contact in the Local Directory to blacklist. Incoming calls from this contact will be rejected automatically.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Select the desired contact, and select **Option > Add to Blacklist**.

The phone prompts you whether to move to the blacklist.

4. Select **OK**.

Searching for Contacts

In the Local Directory, you can enter search criteria to find your desired contact quickly.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select **Search**.
3. Enter your search criteria in the search field.

Blacklist

Incoming calls from the Blacklist are rejected automatically.

Topics

[Adding a Blacklist Contact](#)

[Viewing Blacklist Contacts](#)

[Editing a Blacklist Contact](#)

[Deleting Blacklist Contacts](#)

[Moving a Blacklist Contact to the Local Directory](#)

Adding a Blacklist Contact

You can add a blacklist contact on the phone to prevent someone from calling you.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select **Add**.
3. Enter the blacklist contact's information.
4. Select **Save**.

Viewing Blacklist Contacts

You can view the blacklist contacts from the Blacklist on your phone.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.

Editing a Blacklist Contact

You can update your blacklist contacts' information.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select the desired blacklist contact, and select **Option > Detail**.
3. Edit the blacklist contact information.
4. Select **Save**.

Deleting Blacklist Contacts

You can delete one or all blacklist contacts. If a contact is removed from the blacklist, you can answer the call from the contact normally.

Topics

[Deleting a Blacklist Contact](#)

[Deleting All Blacklist Contacts](#)

Deleting a Blacklist Contact

If you want to answer a call from a specific contact, you need to remove it from the Blacklist.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select the desired blacklist contact.
3. Select **Option > Delete**.

The phone prompts you Delete selected item.

4. Select **OK**.

Deleting All Blacklist Contacts

You can delete all contacts from the Blacklist when you are ready to answer calls from them again.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Highlight the desired blacklist contact, select **Option > Delete All**.

The phone prompts you whether to delete all contacts.

3. Select **OK**.

Moving a Blacklist Contact to the Local Directory

You can move a blacklist contact to a Local Directory. Incoming calls from this contact will not be rejected automatically.

Procedure

1. Navigate to **Menu > Directory > Blacklist**.
2. Select the desired contact, and then select **Add to Contact list**.
The phone prompts you whether to move to contact.
3. Select **OK**.

4.7 Remote Phone Book

The remote phone book is a centrally maintained phone book, stored on the remote server. Users only need the access URL of the remote phone book. The IP phone can establish a connection with the remote server and download the phone book, and then display the remote phone book entries on the phone.

Topics

[Remote phonebook updated to local \(xml\)](#)

[Remote Phonebook](#)

Remote phonebook updated to local (xml)

Remote Phone book is to download all the server's Phonebook(xml) to the phone Local Contacts, you can see the complete organization structure and contact information.

Configure Remote phonebook (.xml) to Local Contacts via Web UI:

1. Go to the web interface and click **Phone -> Directory-> Remote Phonebook update to local (xml)**.
2. Fill in the **URL** (remote phonebook address), the detection interval is 3600s by default.
3. Click **Save**

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

FLYINGVOICE Firmware Version V0.10.55
Current Time 2024-09-27 15:21:14
Admin Mode [Logout] [Reboot]

Status Network Wireless SIP Account **Phone** Administration

Preferences Programmable Key Line Key Dial Rule **Phone Book** Call Recording Call Log Action URL Remote Control Web Dial

Multicast IP

Phone Book Upload & Download Help

Phone Book Upload & Download

Local File Choose File No file chosen
Upload CSV Download CSV

Phone Book Upload & Download

Local File Choose File No file chosen
Upload XML Download XML

Remote phonebook updated to local (xml)

Intervals(s) 3600
URL http://192.168.77.3/Phonebook1587056.xml Save

Corporate Directory(UC2.x)

Server 192.168.50.12
Port 80 Save

Phone Book:
This list shows all the directory entries. Please click "Save Settings" button to save this list after you edit or add an item.

Blocklist:
Telephone numbers saved in this list cannot be called.

Example of xml file (http server):

Not Secure 192.168.77.3

Name	extension	Size	Timestamp
Screenshots		folder	2024/9/27 14:00
extkey.cfg		62.3 KB	2024/9/10 16:00
extkey1.cfg		16.7 KB	2024/9/13 15:00
FVUIADV_7628_GRANDCCOM_V0.P.10.127.21_202407041524_T(P20_P23)error.bin		19.8 MB	2024/7/5 10:00
FVUIADV_7628_GRANDCCOM_V0.P.10.127.23_202407151705_T(P20_P23G)error.bin		19.8 MB	2024/7/16 13:00
P23G1.cfg		5.6 KB	2024/6/27 13:00
P23G2.cfg		3.2 KB	2024/6/14 13:00
Phonebook1587056.xml		304.3 KB	2024/3/21 13:00
Remotel500.xml		127.0 KB	2024/6/14 15:00
SnomInput.xml		498B	2024/9/20 9:00
SnomMenu.xml		558B	2024/9/20 9:00
start.xml		128B	2023/6/8 11:00
YealinkInput.xml		499B	2024/9/20 9:42:07
YealinkIPPhoneDirectory.xml		670B	2023/6/6 14:59:32
YealinkMenu.xml		677B	2024/9/20 9:37:52

```
<?xml version="1.0" encoding="utf-8"?>
<root_group>
  <group display_name="All Contacts"/>
  <group display_name="Blocklist"/>
</root_group>
<root_contact>
  <contact display_name="G100" office_number="100" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G101" office_number="101" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G102" office_number="102" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G103" office_number="103" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G104" office_number="104" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G105" office_number="105" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G106" office_number="106" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G107" office_number="107" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G108" office_number="108" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G109" office_number="109" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G110" office_number="110" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
  <contact display_name="G111" office_number="111" mobile_number="" other_number=""
  Line="0" ring="0" group_id_name="Remote Phone Book" default_photo="" auto_divert="" />
</root_contact>
</root_group>
```

You can view the Phonebook (All Contacts) on the web:

Phone Book


Index	Name	Office Number	Mobile Number	Other Number	Group Name	
1	G100	100			1	<input type="checkbox"/>
2	G101	101			1	<input type="checkbox"/>
3	G102	102			1	<input type="checkbox"/>
4	G103	103			1	<input type="checkbox"/>
5	G104	104			1	<input type="checkbox"/>
6	G105	105			1	<input type="checkbox"/>
7	G106	106			1	<input type="checkbox"/>
8	G107	107			1	<input type="checkbox"/>
9	G108	108			1	<input type="checkbox"/>

Edit Add Delete Move to blocklist

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

View Remote phonebook (All Contacts) through the phone screen:

1. Click **Menu**->**Directory**->**Local Contacts**, you can see the imported phonebook.
2. View the list of contacts in the phonebook

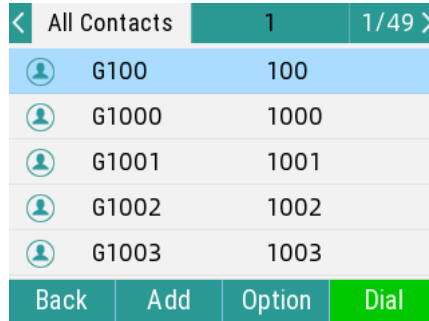

All Contacts		1	1/49
	G100	100	
	G1000	1000	
	G1001	1001	
	G1002	1002	
	G1003	1003	

Back Add Option Dial

Remote Phonebook


You can access the Remote Phone Book remotely and see the complete organization contact information. you can configure up to 4 URLs.

Procedure

Configure the Remote Phone Book via the Web UI:

1. Go to the web UI and click **Phone** -> **Phonebook** -> **Remote Phonebook Download (xml)**
2. In URL, fill in the **URL** address and Phonebook name (directory name), optional Incoming/Outgoing Call Lookup
3. Click **Save**

TIPS: You can fill in more than one remote phonebook URL.

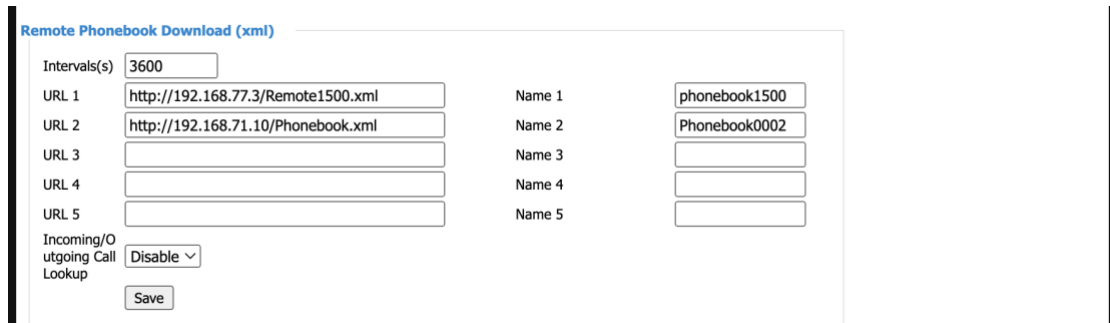

Remote Phonebook Download (xml)

Intervals(s)

URL 1	<input type="text" value="http://192.168.77.3/Remote1500.xml"/>	Name 1	<input type="text" value="phonebook1500"/>
URL 2	<input type="text" value="http://192.168.71.10/Phonebook.xml"/>	Name 2	<input type="text" value="Phonebook0002"/>
URL 3	<input type="text"/>	Name 3	<input type="text"/>
URL 4	<input type="text"/>	Name 4	<input type="text"/>
URL 5	<input type="text"/>	Name 5	<input type="text"/>

Incoming/Outgoing Call Lookup

To view the remote phone book through the phone screen:

1. Click **Menu**->**Remote Phone Book**->**Remote Address Book** and select the imported remote group.
2. View the list of contacts in the **Remote Phone book**.

TIPS: You can Dial/Search/Add Contacts.



	00B_Two	5005
	mical chen	1002
	wang zi jian	10.10.32.147
	zhuby	6010
	00B_Two	29000

Back Add Search Dial

4.8 LDAP

LDAP stands for Lightweight Directory Access Protocol, which is a client-server protocol for accessing a directory service. LDAP directory feature of the Flyingvoice phone allows you to search for contacts.

Configure LDAP Address Book through the web interface:

1. Click **Phone**-> **Phonebook**->**LDAP**, select **Enable** LDAP
2. Fill in the server address information of Corporate address book, as shown below.
3. Click **Save**.

Enable LDAP	Enable ▾
LDAP Label	LDAP Phone Book
LDAP Name Filter	((cn=%)(sn=%))
LDAP Number Filter	((telephoneNumber=%)(mobile=?
Server Address	192.168.50.165
Port	389
Base	dc=pbx,dc=com
User Name	cn=admin,dc=pbx,dc=com
Password	password
Max Hits (1~1000)	50
LDAP Name Attributes	sn cn
LDAP Number Attributes	mobile telephoneNumber homePho
LDAP Display Name	%cn
Protocol	Version 3 ▾
LDAP Lookup For Incoming Call	Disable ▾
LDAP Lookup For Callout	Enable ▾
LDAP Sorting Results	Disable ▾

Save

Example (Labeling selection depends on the server):

Enable LDAP: Enable/Disble

LDAP Label: LDAP Phone Book (Display Name)

LDAP Name Filter: ((cn=%)(sn=%))

LDAP Number Filter: ((telephoneNumber=%)(homePhone=%)(mobile=%))

LDAP Server Address: 192.168.20.165

Port: 389

Base: dc=pbx,dc=com

User Name: cn=admin,dc=pbx,dc=com

Password: password

Max Hits (1~1000): 50

LDAP Name Attributes: cn sn displayName

LDAP Number Attributes: telephoneNumber homePhone mobile mail departmentNumber

LDAP Display Name: %cn

Protocol: Version 3


LDAP Lookup For Incoming Call: Enable

LDAP Lookup For Callout: Enable

LDAP Sorting Results: Enable

Add to Contact/Blocklist through LDAP Phone Book:

1. On the Phone UI, go to **Menu**-> **Directory**, select your **LDAP**.
2. Select a number, press **Option**->**Add to Contact/Blocklist**, you can view the **Detail** of a contact or **Dial**.

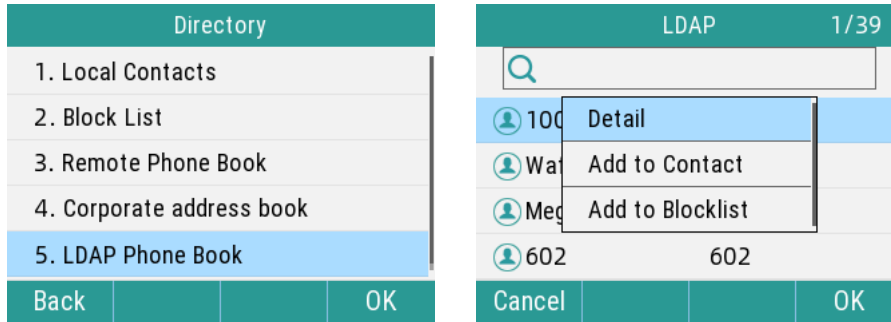

Search Contacts through LDAP Phone Book:

1. On the Phone UI, go to **Menu**-> **Directory**, select your **LDAP**.
2. Enter the **keywords** for the contact and the screen will display the search results.

4.9 Call History

The call history list includes Missed Calls, Dailed Calls, Received Calls, and each list holds 60 entries.

Topics

[Viewing History Records](#)

[Saving a History Record to Local Directory](#)

[Saving a History Record to Blacklist](#)

[Deleting History Records](#)

Viewing History Records

The history record saves the call information such as the caller's name and number, local line and call duration.

Procedure

1. Press **History**.
2. Select the desired list.
3. Select the desired entry.
4. Select **Option** > **Detail**.

Saving a History Record to Local Directory

To identify someone's call the next time, you can save a history record to the Local Directory.

Procedure

1. Select **History**.
2. Select the desired list.
3. Select the desired entry, and select **Option > Add to Contacts**.
4. Edit the contact information.
5. Select **OK**.

Saving a History Record to Blacklist

You can prevent someone from calling you again by saving a history record to Blacklist.

Procedure

1. Select **History**.
2. Select the desired list.
3. Select the desired entry, and select **Option > Add to Blacklist**.
4. Edit the contact information.
5. Select **OK**.

Deleting History Records

You can delete one or all call records from the call history list.

Topics

[Deleting a Call Record](#)

[Deleting All Call Records](#)

Deleting a Call Record

You can delete any call record from the call history list.

Procedure

1. Press **History**.
2. Select the desired list.
3. Select the desired entry, and select **Delete**.

Deleting All Call Records

You can delete all call records from the call history list.

Procedure

1. Press **History**.
2. Select the desired list.
3. Select the desired entry, and select **Delete All**.

The phone prompts you whether to delete all the records.

4. Select **OK**.

4.10 Hot desking

In office scenario, the Hot desking feature allows you to quickly clear all of your phone's current SIP accounts and register new accounts easily and efficiently.

Topic

[Configure Hot desking](#)

[Use Hot desking](#)

Configure Hot desking

Configure the function via the phone web page.

Procedure

1. **Phone**->**Line Key**->Select Line Key x, type set to **Hot desking**
2. **Save**

Key	Type	Line	Value	Label	Extension
Line Key1	Line	Line1			
Line Key2	Line	Line2			
Line Key3	Hot Desking				
Line Key4	Line	Line4			
Line Key5	Line	Line5			
Line Key6	Line	Line6			
Line Key7	Line	Line7			
Line Key8	Line	Line8			

SpeedDial:
You can confi simplified spe function allow the most frec numbers.


EventType:
The function changed acc needs.

Use Hot desking

Procedure


1. In the phone, press **Hot desking**
2. Select "OK" or "Cancel" when prompted?

If you press **OK**, all SIP will be cleared; if you **cancel**, you will return to the home.

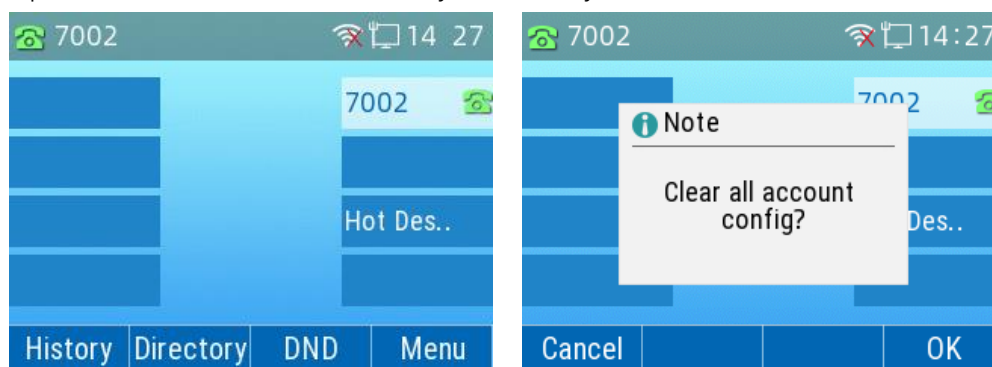

3. After the SIP settings are clear, automatically jump to fill in the interface, you can choose to **Back**, there is no account information at this time; you can also enter a new account number to complete the registration.

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

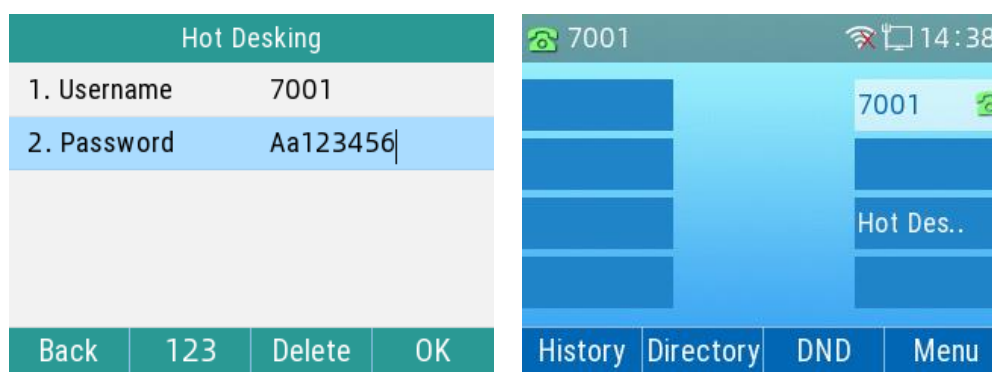

Tip: The registered new account is Account 1 by default.



4.11 Beeper

P2X series phones support HB01 wireless emergency button and PB01 USB Panic Button, the following is the function configuration introduction

Topic

HB01 Call Button

Pairing through the phone UI

1. On the Phone UI, Go to **Menu > Features > Beeper > Beeper pairing list**
2. Press **Search**, the phone will enter the pairing mode, and searching icon  will appear on the top.
3. Press the HB01 button that needs to be paired, the phone UI will show device ID, press Pair, and it will prompt "Pairing the Beeper", and phone UI will show the icon of successful connection .
4. If you want to pair more buttons, repeat **Step 3**.

TIPS: The search mode will be turned on for 60s, if no new device is connected, it will be turned off automatically after the time limit.

Configure SpeedDial through the phone UI

1. Long press **M1 Key** of the phone, enter the interface of Configuration.
2. Select **SpeedDial** type, select **Line**, type in SpeedDial Number.
3. Press **Save**.

TIPS: The corresponding physical phone key for this function is the M1 key.

PB01 USB Panic Button

Settings through the phone UI

1. On the Phone UI, Go to **Menu> Features>Beeper>Emergency button speed dial settings**
2. Enter the emergency speed dialing interface and select the mode of the USB button (Disabled, Silent, SpeedDial)
3. Select **Silent Mode** and fill in the **value** for the Emergency number.
4. Click **Save** Settings.

TIPS: When the mode is Disable, the USB switch will not take action when pressed; when the mode is Silent, there will be no sound during the whole process of dialing out and answering; when the mode is SpeedDial, it will be the normal speed dialing of the call.

Chapter 5 Customizing Your Phone

You can make your phone more personalized by customizing various settings.

Topics

[Basic Setting](#)

[Audio Settings](#)

[AP Mode](#)

5.1 Basic Setting

Topics

[Backlight](#)

[Language](#)

[Time & Date](#)

[Changing the Administrator Password](#)

[Call Immediately key](#)

[Phone lock](#)

Backlight

You can change the brightness of the phone screen during phone activity and inactivity. The brightness automatically changes after the phone has been idle for a specified time.

You can change the screen backlight and time in the following settings:

Backlight Time: The delay time to change the brightness of the phone screen when the phone is inactive. Backlight time includes the following settings:

- **Always On:** Backlight is on permanently.
- **15s, 30s, 1min, 2min, 5min, 10min or 30min:** Backlight is changed when the phone is inactive after the designated time.

Active Level:

The current screen brightness level.

Inactive Level:

Brightness level in standby.

Procedure

1. Navigate to **Menu > Basic > Display > Backlight Time**.
2. Select the desired time from the **Backlight Time** field.
3. Select **Save**.

Language

Your phone supports several languages that you can choose to use on the phone.

Contact your system administrator to find out exactly which languages are supported on your phone.

Procedure

1. Navigate to **Menu > Basic > Language**.
2. Select the desired language.
3. Select **OK**.

The phone language is changed to the selected one.

Time & Date

You can set the time and date manually. The time and date formats are also variable.

Topics

[Setting the Time and Date Manually](#)

[Changing the Time and Date Format](#)

Setting the Time and Date Manually

If your phone cannot obtain the time and date automatically, you can set it manually.

Procedure

1. Navigate to **Menu > Basic > Time & Date > General**.
2. Select the Manual from the General field.
3. Edit the date and time.
4. Select **OK**.

The time and date set on the phone will be changed accordingly.

Changing the Time and Date Format

You can set the phone to display the time in 12-hour format or 24-hour format.

Procedure

1. Navigate to **Menu > Basic > Time & Date > Time Format**.
2. Select the desired time format.
3. Select **OK**.

Changing the Administrator Password

By default, you need input administrator password to access the **Advanced** setting menu.

The default password is "admin". For security reasons, you should change the default password as soon as possible.

Procedure

1. Navigate to **Menu > Advanced > Change Password**.
2. Select **Menu Password** Enter your old and new password information.
3. Select **OK**.

Call Immediately key

You can set the "#" key or the "*" key as the call Immediately key, the default is the "#" key

Setting via phone web

Procedure

1. **Phone-> Preferences-> Miscellaneous**

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

2. Select "#" or "*", click **save and apply**

Miscellaneous

Auto Answer All Phone Number	Disable ▾	Auto Answer by Callinfo	Disable ▾
Auto Answer Delay Time	0	Auto Answer Specify Phone Number	
Dial Time Out (IDT)	5	Call Immediately Key	# ▾
Auto On-hook Mode	Enable ▾	Preferred Audio Device	Enable ▾
ICMP Ping	Enable ▾	Enable Escaped Char	Disable ▾
Backlight Time(seconds)	15 ▾	Phone Lock	Disable ▾
Phone lock password (1-15 digits)	Phone lock timeout (s)	10
Hook Disable	Disable ▾		
Call Display	Name+Number ▾		
Voice Message Prompt Tone	Enable ▾		

Phone lock

To set the keypad lock locally via the phone.

1. Press **Menu**->**Basic Settings**->**Phone Lock**
2. Select the Phone Lock on or off by press **Switch**
3. fill in the **keyboard lock time** (unit: seconds)
4. Click **Set Password**, fill in the new password, confirm again and press **OK**

Tip: If the two password input is same, it will prompt "password change successfully", else it will prompt "two password input inconsistent", you need to input password again

- 5 After successful setting, the LCD will be locked after the screen is turned off, click the **Unlock**, enter password and click **OK** to unlock the screen.

5.2 Audio Settings

You can change the basic audio settings on your phone.

Topics

[Adjusting the Volume](#)

[Setting the Ring Tone](#)

Adjusting the Volume

You can adjust the volume of the ringer, media, and the audio during a call.

Procedure

1. Press the **Volume** key to adjust the volume.

Setting the Ring Tone

You can set distinctive ring tones for groups or contacts in your Local Directory so that you can identify the caller when your phone rings.

The ring tones are used according to this priority: Contact ring tone>Group ring tone>Account ring tone >Phone ring tone.

Topics

[Setting a Ring Tone for the Phone](#)

[Setting a Ring Tone for a Group](#)

[Setting a Ring Tone for a Contact](#)

Setting a Ring Tone for the Phone

You can choose a ring tone for all incoming calls.

Procedure

1. Navigate to **Menu > Basic > Ring > Ring Type**.
2. Select the desired ring tone.
3. Select **OK**.

Setting a Ring Tone for a Group

You can select a unique ring tone for various groups in your Local Directory.

Tip: You can only set a ring tone for a group that is added manually.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired group.
3. Select **Option > Detail**.
4. Select the desired ring tone from the **Ring Type** field.

*If a specific ring tone is selected, this group uses the ring tone according to the priority:
Contact ring tone > Group ring tone.*

5. Select **Save**.

Setting a Ring Tone for a Contact

You can select a unique ring tone for various contacts in your Local Directory. This helps you quickly identify callers according to the ring tones.

Procedure

1. Select **Directory** or navigate to **Menu > Directory > Local Contacts**.
2. Select the desired contact group or **All Contacts**.
3. Choose the desired contact, and select **Option > Detail**.
4. Select the desired ring tone from the **Ring Type** field.
5. Select **Save**.

5.3 AP Mode

You can use the FLYINGVOICE Phone as an AP wireless access point, and you can use wireless devices (mobile wireless devices such as cell phones and computers) for network connection.

Enable AP Mode

AP mode, when turned on, shuts down the phone's connection to Wi-Fi.

Procedure

1. Press the **Menu -> Advanced -> Network -> AP**
2. Select AP **ON**, enter the SSID and Password, select **Security** and **Encryption Mode**

Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

AP			
1. AP	On	◀▶	
2. SSID	123456		
3. Security	WPA-PSK	◀▶	
4. Encryption	AES	◀▶	
5. Password	*****		
Back	123	Delete	OK

3. Press **Save**

4. Phone UI will prompt "Turning on AP mode will turn off Wi-Fi. Do you want to reboot?", Press **OK**

5. Wait for the phone to restart, you can find the AP access point in your Wi-Fi list.

Chapter 6 Maintaining Your Phone

When your phone is unable to operate properly, you need to investigate or troubleshoot issues along with other tasks your system administrator may ask you to perform.

Topics

[Rebooting Your Phone](#)

[Resetting to Factory Settings](#)

6.1 Rebooting Your Phone

The improper operation may cause malfunction. If the malfunction occurs, your system administrator may ask you to reboot your phone.

Procedure

1. Navigate to **Menu > Basic > Reboot**.

The phone prompts you whether to reboot the phone.

2. Select **OK**.

Tip: You can also long press the Cancel key on the keypad when the phone is idle to reboot the phone.

6.2 Resetting to Factory Settings

When some issues occur on your phone and you have tried all troubleshooting suggestions but still do not solve the problem, you can reset your phone to factory configurations.

This operation will delete all your personal configuration settings, and reset all settings to the factory defaults. Check with your system administrator if the personalized settings are kept before resetting your phone to factory settings.

Procedure

1. Navigate to **Menu > Advanced** (default password: admin) > **Reset to Factory Settings**.
2. Select **Reset to Factory Settings**.

The phone prompts you whether to reset the setting.

3. Select **OK**.

The phone begins resetting.

Tip: Reset of your phone may take a few minutes. Do not power off until the phone has started up successfully.