



Bluetooth Adapter BT50 User's Manual



Bluetooth adapter indicator status description:

Fast Flashing in Blue	---	Searching Devices
Slow Flashing in Blue	---	Connecting Device
Steady in Blue	---	Device Connected
Off	---	Device Unconnected

Connection Instruction :

If your Bluetooth adapter has not been paired with any device :

1. Insert the Bluetooth adapter into the phone, the phone will prompt "USB headset connected", the indicator light is flashing state, the Bluetooth adapter is searching for the device;
2. Turn Bluetooth device to pairing mode, Bluetooth adapter will automatically connect the headset, the indicator light will turn to steady state from flashing state. Bluetooth headset connected successfully;
3. Through the Bluetooth headset can realize the Talking and click to answer the phone function.

If your Bluetooth adapter has been paired with a device :

1. Insert the Bluetooth adapter into the phone, the phone will prompt "USB headset connected", the indicator light is slow flashing state, the Bluetooth adapter is trying to connect the paired device;
2. If the paired Bluetooth device is within the connection range and in an idle state (not connected to other terminals), the Bluetooth device will automatically connect to the Bluetooth adapter, and the indicator light will turn to steady state from slow flashing state. Bluetooth headset connected successfully;
3. Through the Bluetooth headset can realize the Talking and click to answer the phone function.

How to pair a new device if your Bluetooth adapter has already been paired with a device :

Method One :

1. Insert the Bluetooth adapter into the PC, run ClaritoneDirect or dongle_pair.exe, you can the delete Bluetooth adapter's information of the paired device, the indicator light will turn to flashing state;

TIPS: You can download the Bluetooth dongle tool exe in www.flyingvoice.com

2. At this time, the Bluetooth adapter can re-pair device.

Method Two :

1. Insert the Bluetooth adapter into the phone, enter "Menu - Advanced-USB Bluetooth Pairinglist Reset";
2. At this time, the Bluetooth adapter can re-pair device.

Note :

1. If the device is FIP13G/FIP14G/FIP15G series, you need to upgrade the device to FVUIADV_V0.7.23.1_202205281223_RC.bin (Flash is 32M) or FVUI_V0.7.23.1_202205281137_RC.bin (Flash is 16M)
2. If the device is P23G/P23GW/P22G/P22P/P21/P21P/P20/P20P/P20G series. need to upgrade the device to FVUIADV_7628_V0.7.77_202303201927_RC.bin or newer version;
2. If the Bluetooth adapter cannot be paired with the Bluetooth device after the Bluetooth device is reset, please try to reset the pairing information of the Bluetooth adapter and then re-pair with the Bluetooth device;
3. When multiple Bluetooth devices to be paired are within the Bluetooth adapter's connection range, the device with the strongest signal will be selected automatically.

