


If you configuring your device for the first time, you will find the steps included in this quick install guide useful. Once you have configured the device with your settings, you will need to reboot the device for your changes to be applied. If you require additional information, please download the latest product manual from our website at www.flyingvoice.com.

have configured the device with your settings, you will need to reboot the device for your changes to be applied. If you require additional information, please download the latest product manual from our website at www.flyingvoice.com.


1 Packaging Contents

The following items are included in your package. Please contact your service provider, if you find anything missing.

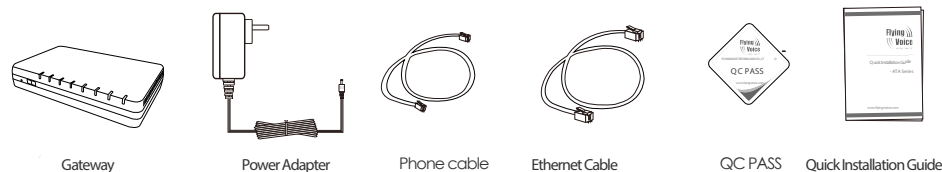

2 Startup

Connect the WAN port of your device to your router or PBX and the LAN port to your PC. Also connect your analog phone(s) to the phone port(s):

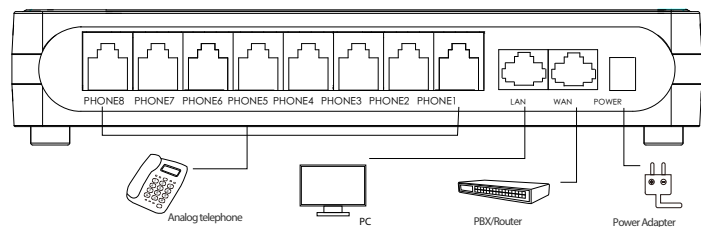

Notice: Do not disconnect the power adaptor from the device while configuring or updating the firmware on the device. Ensure that you always use the power adaptor included in the package to power your device. Using a different power adaptor may damage the device.

LEDs:
After the hardware connections have been completed, check the status of the LED indicators using the following table:

LED	Status	Description	LED	Status	Description
Phone	● On	Registered successfully or no call	POWER	● On	The gateway is powered on and running normally
	● Blinking	Offhook or in a session		● Blinking on 10Hz	Firmware Upgrade
	● Off	Unregistered		● Off	The gateway is powered off
LAN	● On	The port is connected	WAN	● On	The port is connected
	● Blinking	The data is transmitting		● Blinking	The data is transmitting
	● Off	The port is disconnected		● Off	The port is disconnected

3 Network Configuration

In the browser of your PC connected to the LAN port of the device, type "http://192.168.1.1" and press the "Enter" key. A User name and Password dialog box will appear. To login as an Administrator enter "admin" as the username and "admin" as the password. To login as a normal user enter "user" as the username and "user" as the password.

me and Password dialog box will appear. To login as a normal user enter "user"

"In the event you are unable to open the page http://192.168.1.1 with your browser, it might be because of a network conflict with the WAN IP. In that case, open the page http://192.168.2.1 instead."

- DHCP is the most common method where the ISP automatically configures your Internet connection.
- Choose "Static" if you know the network connection settings of your ISP. Fill in the IP parameters provided by your ISP.
- If your ISP uses PPPoE they will provide you a username, password, and instructions.

Notice: In the event you are unable to open the page http://192.168.1.1 with your browser, it might be because of a network conflict with the WAN IP. In that case, open the page http://192.168.2.1 instead."

4 Phone Registration

Click the 'FXS1' tab to begin configuring the first SIP account for your device.

First set the field 'Line Enable' to 'Enable', then enter the SIP registration parameters provided to you by your phone provider as show in the 'Proxy and Registration' and 'Subscriber Information' section.

Basic

Basic Setup

Line Enable: Outgoing Call without Registration:

Proxy and Registration

Proxy Server: Proxy Port:

Outbound Server: Outbound Port:

Backup Outbound Server: Backup Outbound Port:

Subscriber Information

Display Name: Phone Number:

Account: Password:

Follow the same process to configure the other SIP accounts.

Parameters Name	Description	Parameters Name	Description
Line Enable	If or not enable Line	Display Name	The number will display in callee
Proxy Server	The domain name or IP address of SIP server	Phone Number	Number of telephone provided by SIP Proxy
Outbound Proxy	Outbound Proxy IP or domain name	Account	SIP account provided by SIP Proxy
Outbound Port	Outbound Proxy 's Service port	Password	SIP password provided by SIP Proxy
Proxy Port	The port which SIP Server supports for VOIP service, default is 5060		



Quick Installation Guide

- Gateway Series