



## SW7R-Pro Quick Installation Guide

[www.flyingvoice.com](http://www.flyingvoice.com)

## Know Your Device

### Packing list

The following items are included in your package. Please contact your service provider, if you find anything missing.



SW7R-Pro



PoE Adapter



AC Cable



CAT6 Network Cable



Metal Plate



Metal Circle




Screws



Quick Installation Guide


### LED

Type	Function	Status
System LED (1)	Firmware Upgrade	Red Blinking
	Reboot	Red Blinking
	Factory reset	Red Blinking
	System Booted up	Green Solid
	Port Negotiation (2500Mbps/1000Mbps)	Green Blink for 5s
	Port Negotiation (100Mbps)	Amber Blink for 5s
	System/Port Fault	Red Blinking
Ethernet LED (2-9)	Port Negotiation (2500Mbps)	Green Blinking
	Port Negotiation (1000Mbps)	Green Blinking
	Port Negotiation (100Mbps)	Green Solid

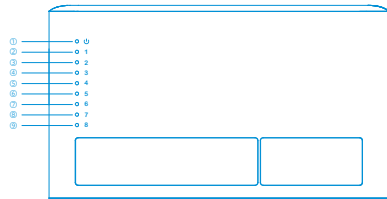

### Ports


Number	Interface Description
1	2.5Gbps-LAN/PoE In & Support Connecting Additional More PoE Switches
2	1Gbps-LAN/PoE IN
3	1Gbps-LAN/PoE IN
4	1Gbps-LAN/PoE IN
5	1Gbps-LAN/PoE IN
6	1Gbps-LAN/PoE IN
7	1Gbps-LAN/PoE IN
8	2.5Gbps-UPLINK/PoE OUT

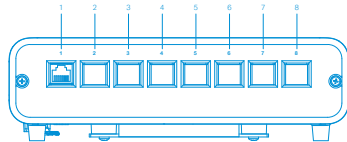

## Installation Steps

### Wall-mounted Installation


1. Use the supplied metal plate to align the 2 wall-mounting holes on the plate with the 2 holes on the device on the wall to mark and determine the wall-mounting position of the device.
2. Drill 2 screws into the marked position on the wall to leave a suitable length of screws to protrude from the wall for hanging the device.
3. Use the supplied screws to align the 2 screw holes on the left and right sides of the device with the holes on the metal plate, and then insert the screws into the plate to align it with the holes.
4. Attach the metal plate to the device and align the 2 wall-mounting holes on the plate with the screws on the wall, then pull down the device to secure it.

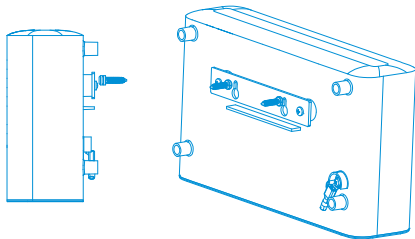

Wall-mounted Installation

### Pole-mounted Installation

1. Wrap the clamp around the pole/column and insert the metal plate through the holes in the clamp.
2. Tighten the clamp and screws to secure the device.

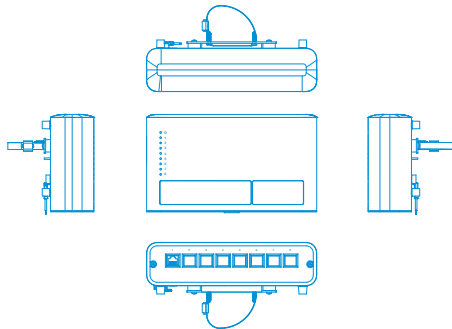

Pole-mounted Installation


### Log in to the page

Username and password: admin/the last 6 digits of SN  
(you can get the password through the label of the device case)

#### Login instructions

- ① Make sure your computer is properly connected to the LAN1 & uplink port on the switch
- ② Set the static IP address of your computer to 192.168.30.1/24
- ③ Set your computer's VLAN to Tag 960

- ④ Open your browser and log in to the web page by entering the URL format: `http://the management IP address`, please enter the corresponding address in the address input field: `http://192.168.30.1`, the page will redirect to the login page of the device, as shown below:

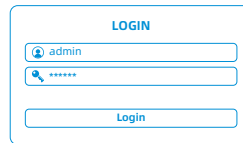

### Flyingvoice Product Warranty Regulations

#### Dear Customer:

Thank you for purchasing the products of Flyingvoice Network Technology Co.,Ltd.

Since the date of purchase, where the installation and use in accordance with the quick installation guide, our company will provide free maintenance within one year, after one year maintenance only charge the maintenance fee. Maintenance for non-product quality issues, such as improper use, improper storage, unauthorized disassembly and other causes for damage, will be charged for maintenance fee.