



快速安装指南 PR08

1 包装清单

请检查您购买的产品是否包含以下组成部件,若缺少请与您的经销商联系。

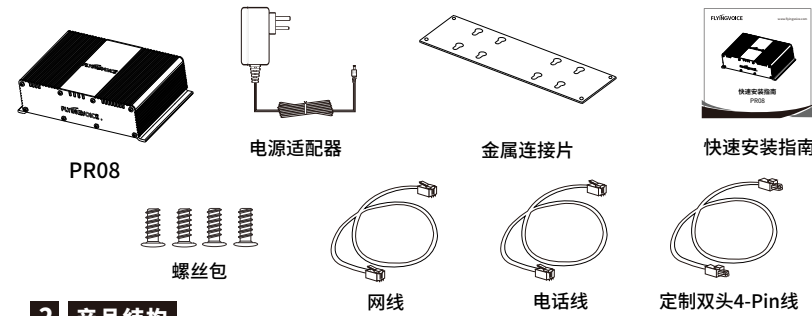

2 产品结构

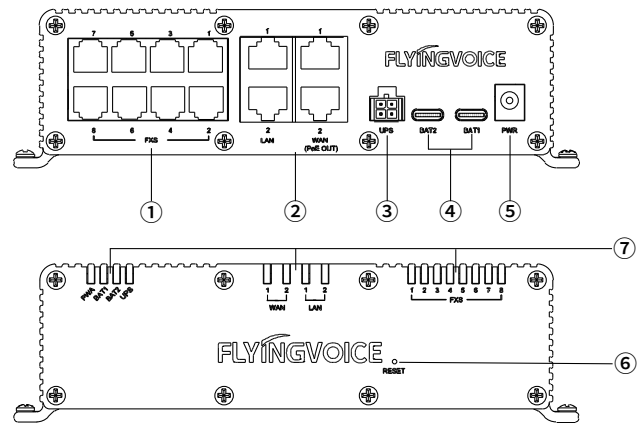

3 接口说明

序号	接口名称	接口描述
①	FXS接口 1-8	外接模拟话机或传真机
②	WAN/LAN 接口 1-4	自适应网络接口,可接入Internet 或外接PC等其他网络设备,支持盲插,支持PoE Out
③	UPS接口	外接 LM150 等终端设备,为其供电
④	BAT接口 1/2	外接移动电源,作为备份电源
⑤	电源接口	外接 19V / 3.42A 电源
⑥	Reset按钮	长按 5 秒,恢复出厂设置
⑦	指示灯	指示灯与设备状态的对应关系,请看下表

4 指示灯说明

FXS接口 指示灯

状态	描述
绿色常亮	注册账号成功
绿色快闪	来电振铃、摘机、通话中
熄灭	未连接或注册失败

UPS接口 指示灯

状态	描述
绿色常亮	连接成功后输出电源
熄灭	未连接或设备自身功率不足 (不输出电源)

WAN/LAN接口 指示灯

状态	描述
绿色常亮	连接成功
绿色快闪	连接后传输数据中
熄灭	未连接

PWR接口 指示灯

状态	描述
绿色常亮	上电成功
熄灭	未上电或上电异常

BAT接口 指示灯

状态	描述
橙色常亮	移动电源充电中
绿色慢闪	65W 移动电源放电中
橙色慢闪	非 65W 移动电源放电中
熄灭	未连接或不对移动电源充电

5 设备安装


PR08支持以下两种安装方式,请使用飞音标配的配件进行组装。

桌面放置

- 您可以简单地将设备水平放置在桌面上使用。

挂墙安装

- 使用自带的金属片,在墙面根据金属片的 8 个挂墙孔,标记并确定设备壁挂位置;
- 在墙面标记处钻入 8 颗螺丝,预留合适的螺丝长度在墙面以外,用于悬挂设备;
- 使用自带的螺丝,根据设备背部预留的 4 个螺丝孔,将金属片对齐孔位并钻入螺丝;
- 固定金属片和设备后,将金属片的 8 个挂墙孔扣于墙面螺丝上,下拉设备使之锁定。

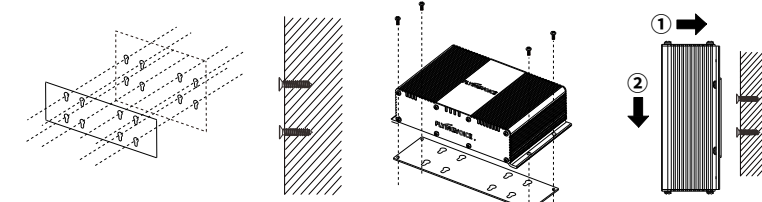

6 基本配置

- 设备上电: 使用自带的电源适配器,一端插入设备的 PWR 接口,一端插入电源插座,设备自动启动;


- 设备联网: 使用自带的网线,连接设备 WAN 口至可用的网络适配器,若搭配飞音 LM150 使用,则接入 LM150 的 LAN 口,设备自动联网并获取 IP 地址;
- 若用户需要登录 Web 后台配置,使用网线连接设备的 LAN 口至 PC 网口,并在 PC 浏览器上访问设备的 LAN 口 IP 地址(默认:192.168.1.1),自动跳转至登录平台后,输出登录账号和密码(admin / SN号后6位),则可进入后台页面进行相应配置;
- 若您需要连接模拟话机使用,使用自带的电话线连接设备的 FXS 口至模拟话机,再在 Web 后台配置话机账号;
- 以上均连接配置完成后,可通过 2 个 USB Type-C 接口连接 2 个充电宝,作为设备的备用电源,在紧急断电时为设备供电,保障设备正常工作;
- 注:建议采用支持65w以上C-to-C数据线连接,充电宝最佳规格为 65W PD3.0,部分带按键充电宝需要手动激活。
- 若您搭配其他带有4-Pin供电口的设备使用,还可使用自带的 UPS 短线,连接设备 UPS 接口至受电设备,此时PR08作为不间断电源为外接设备供电,可根据需求选择连接。

飞音时代产品保修条例

尊敬的客户:
感谢您选购深圳飞音时代网络通讯技术有限公司的产品。自您购买产品之日起,凡按照使用说明书安装使用,一年内本公司免费维修,一年后维修只收取维修工本费。非本公司产品质量原因引起的维修,如使用不当,保管不妥,擅自拆机等原因造成的损坏,将收取维修工本费。
注:申请产品维修时,请把此保修卡和所购产品一起妥善送(寄)回售后服务部维修。

保修卡/Warranty Card


产品型号/Product Model	标签/Tag
客户名称/Customer Name	购买日期/Date of Purchase
客户地址/Customer Addr.	
联系人/Contact Person	电话/Tel.
经销单位/Distributor	
联系人/Contact Person	电话/Tel.
销售日期/Date of Sale	

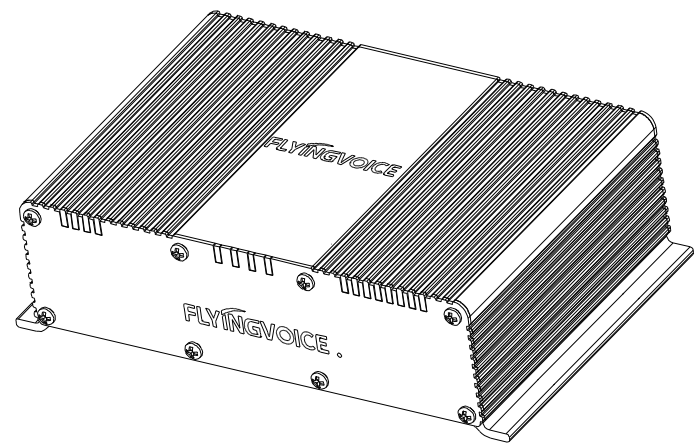


Quick Installation Guide PR08

1 Packing List

The following items are included in your package. Please contact your service provider, if you find anything missing.

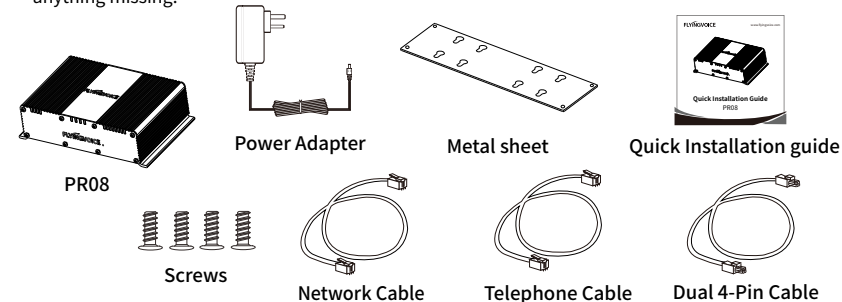

2 Physical Specification

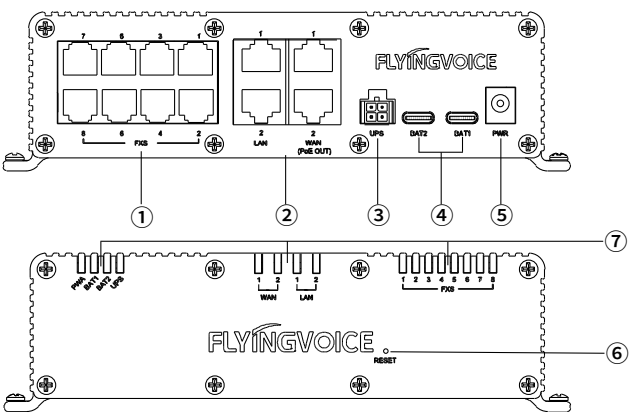

3 Port Description

Number	Port Name	Port Description
①	FXS Port 1-8	Connect to analog phone or fax
②	WAN/LAN Port 1-4	For Internet access Connect to PC and other terminal devices for network
③	UPS Port	Connect to LM150 or other terminal devices to supply power
④	BAT Port 1/2	Connect to power bank for backup power supply
⑤	Power Port	Connect to 19V/3.42A power adapter
⑥	Reset Button	Press and hold for 5 seconds to restore factory settings
⑦	Indicator	Check the following table to get description of indicators

4 Indicator Description

FXS Port Indicator

Status	Description
Solid Green	Account Registered
Blinking Green	Ringling, Off-hook, On Call
Off	Disconnected or Registration failure

UPS Port Indicator

Status	Description
Solid Green	Power supply after connection
Off	Disconnected or Insufficient device power (no output)

WAN/LAN Port Indicator

Status	Description
Solid Green	Connection successful
Blinking Green	Data transmission
Off	Disconnected

PWR Port Indicator

Status	Description
Solid Green	Power On
Off	Power Off or Power On abnormality

BAT Port Indicator

Status	Description
Solid Orange	Power bank charging
Slow Blinking (Green)	65W Power bank discharging
Slow Blinking (Orange)	Non-65W Power bank discharging
Off	Disconnected or No-charging

5 Device Installation


PR08 supports two installation methods, please use accessories from flyingvoice to install.

Desktop Positioning

- Simply place the device horizontally on your desktop.

Wall-Mounted Installation

- Using the metal sheet included in the package, mark the wall mounting position on the wall;
- Drill 8 screws at the wall, allowing part of the screw beyond the wall for hanging the device;
- Using the screws included in the package, align the metal sheet with the holes and drive in the screws according to the 4 pre-drilled screw holes on the back of the device;
- After fixing the metal sheet and the device, snap the 8 wall mounting holes of the metal sheet onto the screws on wall and pull down the device to lock it in place.

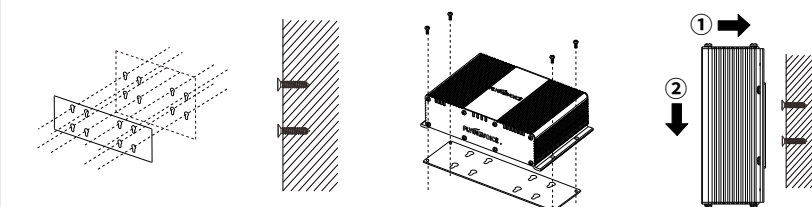

6 Basic Configuration

- Power Up: Use the supplied power adapter, plug one end into the PWR connector of the device and one end into a power outlet, and the device will start up automatically.
- Networking: Use the supplied cable to connect the WAN port of the device to an available network adapter, if used with the Flyingvoice LM150, please connect the LAN port of the LM150 to the WAN port of PR08, the device will obtain an IP address automatically.
- If you need to log in the Web configuration, please use the network cable to connect the LAN port of the device to the PC, enter the IP address of LAN port through PC browser (default: 192.168.1.1), and enter username and password(admin/last 6 digits of SN number), it will automatically jump to the status page.
- If you need to connect to an analog phone, use the supplied telephone line to connect the FXS port of the device to an analog phone, and then configure the phone account in the Web Interface;
- After all the above connections and configurations are completed, you can connect two power bank through two USB Type-C ports to serve as a backup power source for the device, so that it can supply power to the device in case of an emergency power failure and ensure the normal operation of the device.

Note: It is recommended to use C-to-C USB cable that support over 65w charging to connect, and the best specification is 65W PD 3.0. Some power bank need to be activated manually.

- If the device is used with other routers or CPE with 4-PIN power port, you can also use the 4PIN cable to power them, the UPS Port can be used to output uninterruptible power supply (up to 22W).

Flyingvoice Product Warranty Regulations

Dear Customer:

Thank you for purchasing the products of Shenzhen Flyingvoice Network Technology Co.,Ltd. Since the date of purchase, where the installation and use in accordance with the quick installation guide, our company will provide free maintenance within one year, after one year maintenance only charge the maintenance fee. Maintenance for non-product quality issues, such as improper use, improper storage, unauthorized disassembly and other issues for damage, will be charged for maintenance fee.

Note: When applying for product maintenance, please send the warranty card in this guide and the purchased product back to the customer service department properly for maintenance.